
User Manual

Home Energy Storage System

Soluna S12 NA

Jan.2021| Revision A.1

About this manual

This manual describes how to install the Soluna S12 NA, Reading this manual before you attempt to install the product, and following the instructions throughout the installation process. If you are uncertain about any of the requirements, recommendations, or safety procedures described in this manual, contact Soluna immediately for advising and clarification. The information included in this manual is accurate at the time of publication. however, with regards to the product design and technical specification updates, our company reserves the right to make changes at any time without prior notice. e. In addition, the illustrations in this manual are meant to help explain system configuration concepts and installation instructions. The illustrated items may different from the actual items at the installation location.

Content

1 Safety precautions	5
1.1 Warning signs	6
1.2 Safety guide	6
1.2.1 Transportation and installation	7
1.2.2 Grid-tied operation	8
1.2.3 Maintenance and replacement	8
1.2.4 What to do after scrapping	8
2 Product Introduction	9
2.1 Features	9
2.2 Application	9
2.3 Outline Dimensions	10
2.4 Functional description	11
2.4.1 basic principle of Soluna S12 NA	11
2.4.2 Working mode	12
2.5 Technical data	12
2.5.1 Technical data of System	12
2.5.2 Technical data of battery module	14
2.6 Appearance	16
3 Installation	19
3.1 Installation tools	19
3.2 Installation spacing	20
3.3 Wire specifications	20
3.4 Installation step	20
3.4.1 Unpacking confirmation	20
3.4.2 Basic installation requirement	21
3.4.3 Installation procedures	22
4 How to operate Soluna	35
4.1 Turn on or turn off Soluna	35
4.2 How to operate LCD	36
4.2.1 Place of LCD	36
4.3 How to operate LCD screen (user screen)	37
4.3.1 Position of LCD	37
4.3.2 How to check the information of LCD screen	38
4.3.3 How to check the information of "Status" icon	38
4.3.4 How to Setting parameters of Soluna system	40
4.3.5 How to check the information of "Data" icon	44
4.3.6 How to check the production information of Soluna system	44
4.3.7 How to Check the fault information	46

5.How to operate the LCD （only for installer）	47
5.1 battery parameter setting.....	47
5.2 Grid parameters setting.....	48
5.3 Others	50
 6.Caution	 51
7 Troubleshoot	52
8.How to use the generator & AC couple function.....	56
9.Contact us	56

1 Safety precautions

Energy storage integrated machines are designed and tested strictly in accordance with relevant international safety standards. As an electrical and electronic device, all relevant safety regulations must be strictly complied during installation, operation, and maintenance. Incorrect use or misuse may result in:

- Injury to the life and personal safety of the operator or other people.
- Damage to the machine or other property belongs to the operator or other people.
- This chapter mainly various warning symbols in operation manual and provides safety instructions for the installation, operation, maintenance and use of energy storage integrated machines.





Statement

Our company will not responsible for any consequence caused by any of the following events.



- Damage caused by transportation.
- The storage conditions do not meet the requirements specified in the manual, resulting in damage.
- Incorrect storage, installation, and use.
- Unqualified personnel install and operate the machine.
- Failure to comply with the operation instructions and safety precautions in this manual.
- Operate in extreme environments which are not covered in this manual.
- Exceed the operation range of parameters that specified in the technical specification.
- Unauthorized disassembly, modification, or modification of the software code.
- Device damage caused by abnormal natural environment (force majeure, such as lightning strikes, earthquakes, fires, storms, etc.)
- Warranty expiration without extension of the warranty service.
- Installation or use in environment which are not specified in related international standards.





1.1 Warning signs

Warning signs are used to warn you about the conditions that may cause severe injury or damage to the device. They instruct you to exercise caution to prevent danger. The following table describes the warning signs used in this manual.


Sign	Name	Description
	Danger	Serious physical injury or even death may occur if related requirements are not followed
	Warning	Physical injury or damage to the devices may occur if related requirements are not followed.
	Electrostatic discharge	Damage may occur if related requirements are not followed
	Hot sides	Sides of the device may become hot. Do not touch.
Note	Note	Steps to take for ensuring the proper running of the device.

1.2 Safety guide

	<ul style="list-style-type: none">• After receiving this product, first confirm the product package is intact. If any question, contact the logistic company or local distributor immediately.• The installation and operation of the machine must be carried out by professional technicians who have received professional trainings, and thoroughly familiar with all the contents in this manual and the safety requirements of the electrical system.• Do not carry out connection/disconnection, unpacking inspection and unit replacement operations on the machine when power source is applied. Before wiring and inspection, users must confirm the breakers on DC and AC side of inverter are disconnected and wait for at least 10 minutes
	<ul style="list-style-type: none">• Ensure there is no strong electromagnetic interference caused by other electronic or electrical devices around the installation site.• Do not refit the machine unless authorized.• All the electrical installation must conform to local and national electrical standards.• Ground with proper technics before operation

	<ul style="list-style-type: none"> Do not open the surface cover of the machine unless authorized. The electronic components inside the machine are electrostatic sensitive. <p>Do take proper anti-electrostatic measures during authorized operation.</p>
	<ul style="list-style-type: none"> Do not touch the housing of the machine or the radiator to avoid scald as they may become hot during operation
	<ul style="list-style-type: none"> The machine needs to be reliably grounded.
	<ul style="list-style-type: none"> Ensure that DC and AC side circuit breakers have been disconnected and wait at least 10 minutes before wiring and checking.
<p>Note: Technical personnel who can perform installation, wiring, commissioning, maintenance, troubleshooting and replacement of the energy storage inverters must meet the following requirements:</p> <ul style="list-style-type: none"> Operators need professional training. Operators must read this manual completely, and master the related safety precautions. Operators need to be familiar with the relevant safety regulations for electrical systems. Operators need to be fully familiar with the composition and operating principle of the entire energy storage system, and related standards of the countries/regions in which the project is located. Operators must wear personal protective equipment. 	

1.2.1 Transportation and installation


	<ul style="list-style-type: none"> Keep the package and unit complete, dry and clean during storage and transportation. This machine is heavy. Please remove and install it with at least Two people. To ensure the normal and safe operation of the energy storage integrated machine and avoid personal injury, please select proper handling and installation tools, and take mechanical protection measures to protect personal safety, such as wearing smashing shoes, coverall and so on. Only qualified electricians are allowed to install the machine. Do not put and install the machine on or close to flammable or explosive materials. Do not install the machine in a place where children and other people can easily touch it. To avoid a risk of electric shock, please remove rings, bracelets, and other metal jewelry on your hands before installation and electrical connection. The solar cell modules exposed to the sunlight may generate
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

	<p>dangerous voltage. Users must cover the cell modules with fully light shading materials before electrical connection.</p> <ul style="list-style-type: none"> • The input voltage of the machine should not exceed the maximum input voltage, otherwise damage may occur. • The machine is not suitable for the positive or negative grounding systems of solar cell modules. • Ensure the proper grounding of the inverter. • Ensure reliable installation and electrical connection.
--	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------


1.2.2 Grid-tied operation

Note	<ul style="list-style-type: none"> • Only qualified electricians are allowed to operate the machine under the permission of local power departments. • All electrical connections must meet the electrical standards of the countries/regions in which the project is located. • Ensure reliable installation and electrical connection before operation. • Do not open the cover of the machine when the machine is working or any circuit is connecting to the machine.
-------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

1.2.3 Maintenance and replacement

	<ul style="list-style-type: none"> • Only qualified electricians are allowed to perform the maintenance, inspection, and component replacement of the machine. • Please contact the distributor or manufacturer for maintenance. • In order to avoid irrelevant personnel from entering the maintenance area during maintenance, temporary warning signs must be placed to warn non-professionals to enter or use fence for isolation. • Before carrying out any maintenance operations, all input power to the machine must be disconnected first, and wait for at least 5 minutes until the internal parts of the machine are fully discharged. • Please follow the electrostatic protection norms, and take correct protective measures because there are mostly electrostatic sensitive circuits and devices in the machine. • Do not use parts and components not provided by our company during maintenance. • Restart the machine after eliminating the faults and problems which may affect the safety and performance of the machine. • Do not get close to or touch any charged metal conductor parts of the grid or running system, otherwise electric shock or fire may occur. Please do not ignore the warning icons and instructions with “electric shock”.
------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

1.2.4 What to do after scrapping

	<ul style="list-style-type: none"> • Do not dispose of the machine together with household waste. The user has the responsibility and obligation to send it to the designated organization for recycling and disposal.
-------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

2 Product Introduction

Soluna S12 NA Home Energy Storage System can connect with solar power generation system, which ensure the users can use environmentally-friendly energy 24 hours at any time. ESS store the energy generated by PV, and uses it whenever needed, not only reduce the purchase of electricity from the grid, but also improves the household energy self-consumption and saves the electricity cost. Soluna integrated energy storage solve solution, help users with achieving maximize the self-use of green energy.

2.1 Features

- intelligent power management
- Simple user controls, power data history analysis, and programming
- Capacitive touch screen interface
- Secure battery access door
- height-adjustable threaded appliance-grade feet for stability and level appearance

2.2 Application

- Self use
- Peak Shaving
- Emergency power

2.3 Outline Dimensions

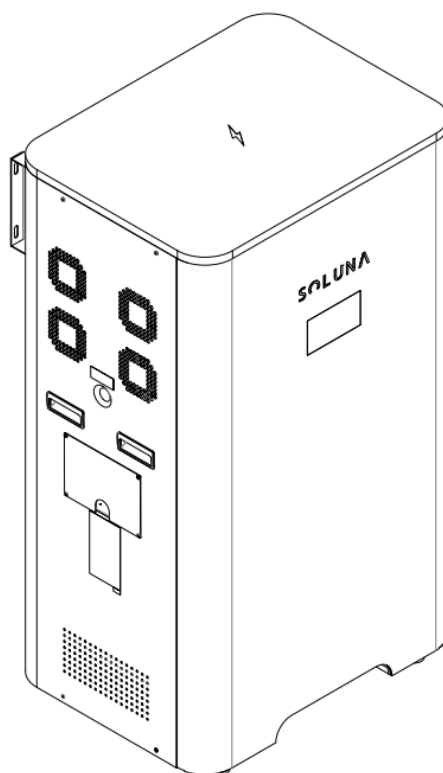


Figure 2.1 outline dimension

Width	750	mm
Depth	565	mm
Height	1335	mm
Weight	300	kg

2.4 Functional description

2.4.1 basic principle of Soluna S12 NA

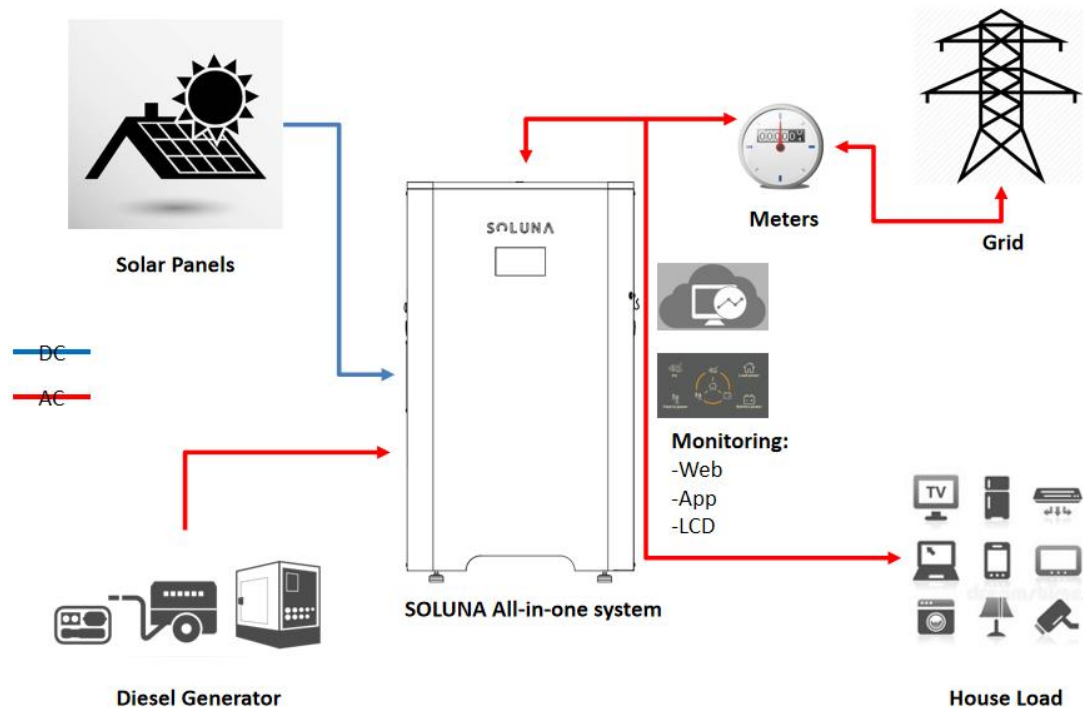


Figure2.2 basic principle of Soluna S12 NA

2.4.2 Working mode

Soluna S12 NA has the following working modes for your home energy storage system.

Mode 1: In daytime, PV power will charge the battery in priority, if battery is full, PV power is used to power the loads, then excess power sell to the grid.

Mode 2 : At night time, Battery power the loads, if battery is not sufficient, grid will supplement.

Mode 3 : If grid malfunction or in no grid region, PV and battery can power the loads together.

Mode 4 : When the battery is low and PV power is unavailable. Grid can charge the battery and at the same time, Grid will power the loads.

Mode 5 : Generator can charge the battery bank.

Mode 6 : If Time Of Use function is enabled, will ensure battery remaining power and grid sell power is adjustable.

Mode 7: UPS Function can ensure important loads still powered in case grid suddenly fail down.

2.5 Technical data

2.5.1 Technical data of System

	Specifications table			
Model	Soluna S12-5K NA	Soluna S12-6K NA	Soluna S12-7.6K NA	Soluna S12-8K NA
PV input				
Max. recommended DC power (W)	6500	7800	10400	10400
Vmax PV (Vdc)	500	500	500.	500
Start-up Voltage (V)	150	150	150	150
Nominal DC operating voltage (V)	360	360	360	360
MPPT voltage range (Vdc)	125-425Vdc	125-425Vdc	125-425Vdc	125-425Vdc
Max. input current (A)	11A/11A	18A/9A	18A/18A	18A/18A
Isc PV (absolute Max.) (A)	22	22	22	22
Number MPPT trackers	2	2	2	2
Number input strings	2	2	2	2
AC input and output				
Normal Voltage (VAC)	120/240 (Split phase) 127/220 (3 phase)			
Frequency (Hz)	60Hz			
Max. AC output current (A)	20.8A	25A	31.7A	33.4A
Max. AC input current (A)	20.8A	25A	31.7A	33.4A
Max. continuous Power (kW)	5 kW	6 kW	7.6 KW	8 kW

Power factor range	-0.8~+0.8	-0.8~+0.8	-0.8~+0.8	-0.8~+0.8
Off-Grid AC Output				
Normal Voltage (VAC)	120/240 (Split phase) 127/220 (3 phase)			
Frequency (Hz)	60Hz			
Max. AC output current (A)	20.8A	25A	31.7A	33.4A
Max. continuous Power (kW)	5 kW	6 kW	7.6 kW	8 kW
Power factor range	-0.8~+0.8	-0.8~+0.8	-0.8~+0.8	-0.8~+0.8
Battery data				
Battery type	LFP	LFP	LFP	LFP
Module quantity (unit)	3	3	3	3
Nominal Storage capacity (kWh)	11.52	11.52	11.52	11.52
Usable Storage Capacity (kWh)	9.22	9.22	9.22	9.22
Battery capacity (Ah)	225	225	225	225
Normal voltage (V)	51.2	51.2	51.2	51.2
Voltage range (V)	42~58	42~58	42~58	42~58
Max. charge current (A)	120A	135A	150	150
Max. discharge current (A)	120A	135A	150	150
DOD	80%	80%	80%	80%
Cycle life	6000	6000	6000	6000
Others				
Protective class	Class I			
Overvoltage category	OVC II(PV) , OVCIII(AC main Grid)			
Dimensions(mm)	W*D*H=750*565*1335			
Weight (kg)	294	294	294	294
Display	7" graphic LCD			
Communication	WIFI,CAN			
Working temperature	-10~+40 (>45℃ derating)			
Storage stability range (°C)	-20~+60			
Relative humidity	0~95%			
Altitude (m)	<2000			
Cooling methods	Forced airflow			
Ingress protection	IP20			
Condition	Indoor conditioned			
Certificates	UL 1973:2018 UL 9540:2016 CFR 47 Part 15 (2019) ANSI C63.4 (2014)			

Warranty
Please refer to SOLUNA WARRANTY CONDITIONS

2.5.2 Technical data of battery module

Physical Characteristics

Width	205 mm
Depth	678 mm
Height	436 mm
Weight	60 kg

Electrical Characteristics

Battery type	LFP
Total Energy Capacity	3.84 kWh
Usable Energy Capacity	3.07 kWh
Battery Capacity (Nominal)	75 Ah
Nominal Voltage	51.2 V
Usable Voltage Range	48~57.6 V
Charge Current (Recommended)	37.5A
Discharge Current (Recommended)	37.5A
Max. Continuous Charge Current	50A
Max. Continuous Discharge Current	50A
DOD	80%
Internal resistance	≤60 mΩ
Cycle life @ 25°C (under standard charge and discharge conditions, charge 0.2C, discharge 0.2C)	≥6000
DC Disconnect	Contactor Fuse

BMS

Power consumption	<3W (work), <100mW (sleep)
Monitoring parameters	System Voltage System Current Cell Voltage Cell temperature
Communication	CAN
Protection	Over voltage Under Voltage Over current Over temperature Under temperature

System Configuration

Module parallel	1~4 Parallel
-----------------	--------------

Operating Conditions

Installation Location	Indoor
Operating Temperature	-10~45 °C
Operating Temperature (Recommended)	15~30 °C
Storage Temperature	-20~60 °C
Humidity	5%~95%
Altitude	Max. 2,000 m
Cooling Strategy	Natural Convection

Reliability & Certification

Certificates	Cell: UL1642
	Battery Module: IEC62619 / UL1973
Transportation	UN38.3
Ingress Rating	IP20

Warranty

Please refer to SOLUNA WARRANTY CONDITIONS

2.6 Appearance

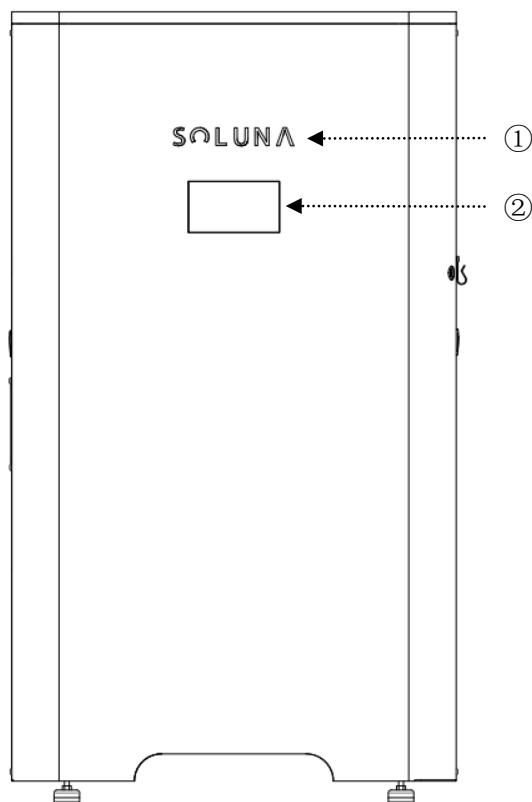


Figure 2.3 Appearance

Number	Name	Remark
①	Soluna brand	
②	LCD panel	

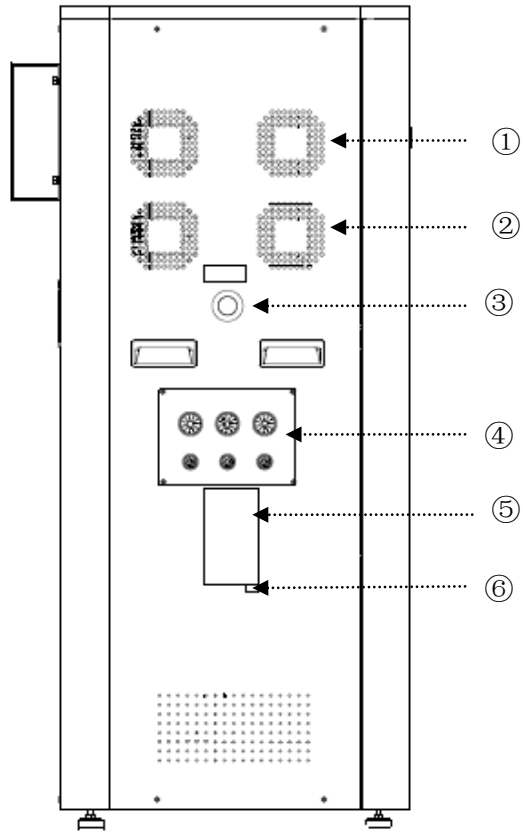


Figure 2.4 Appearance

Number	Name	Remark
①	FAN outlet	
②	FAN outlet	
③	Emergency Stop	
④	Incoming wire port	
⑤	Label	
⑥	Product S/N	







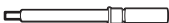




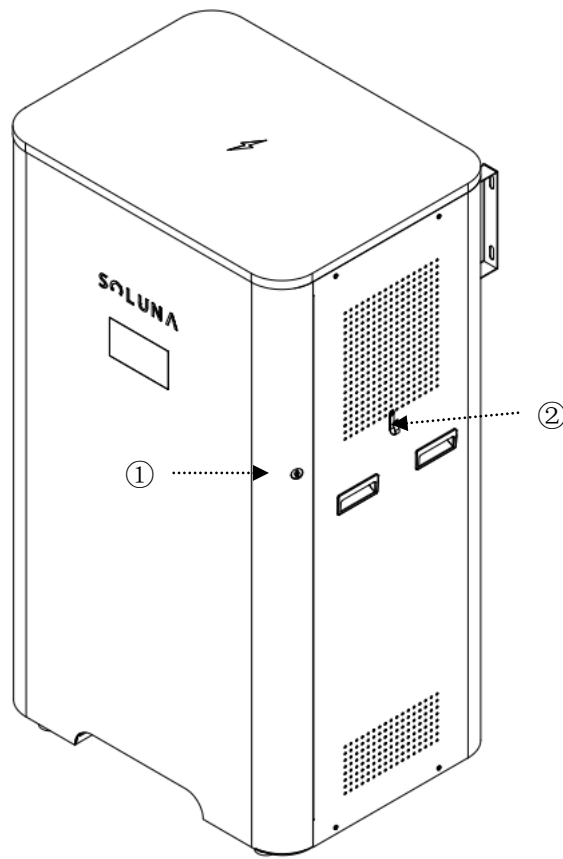


Figure2. 5 Appearance

Number	Name	Remark
①	Door lock of system	
②	Door Key	

3 Installation

3.1 Installation tools

Item	Photo	Remark
1		Marking pen
2		Impact drill(ϕ 12 mm)
3		Steel tape
4		Torque wrench (Opening size:13mm)
5		Phillips-screwdriver (M6,M8)
6		Straight screwdriver
7		Multimeter
8		Safety gloves
9		Safety goggles
10		Dust mask
11		Safety shoes

3.2 Installation spacing

In order to ensure good ventilation of the energy storage integrated machine, please reserve enough installation spacing around the machine during installation.

Position	Min spacing	Remark
Side spacing	100cm	There needs to be a clearance of 100cm on either side of Soluna system
Back spacing	10cm	It needs to be installed against the wall

Note: For detailed requirements about the narrowest maintenance channel, escape route, etc., refer to the applicable standards of the country/ region where the project is located.

3.3 Wire specifications

In order to standardize the specification of ac and dc connectors or terminals of compatible inverters, the following requirements are required for connecting ac and dc wires of corresponding types of inverters

Model	GRID & Load side	PV Load
Soluna S12-5K NA	It is recommended to use 10AWG of wire	It is recommended to use 10AWG of wire
Soluna S12-6K NA	It is recommended to use 8AWG of wire	It is recommended to use 10AWG of wire
Soluna S12-7.6K NA	It is recommended to use 8AWG of wire	It is recommended to use 10AWG of wire
Soluna S12-8K NA	It is recommended to use 8AWG of wire	It is recommended to use 10AWG of wire

3.4 Installation step

3.4.1 Unpacking confirmation

Before unpacking, check carefully whether the product information in the order is consistent with that on the nameplate of the package box, and whether the product package is intact. If there is any question, please contact the supplier timely. Store the idled machine in its original package, and take anti-moisture and anti-dust measures. after taking the machine out of the box, check the following items:

Item	Name	Qty (pcs)	Remark
1	System case	1	
2	Battery module	3	
3	key	1	
4	Screw-M6*12	18	
5	Screw-M4*6	6	

6	Expansion bolts-M8*100	4	
7	Module mounting bracket 1	2	
8	Module mounting bracket 2	1	
9	Wall mounting bracket	2	
10	PV connector removal tool	1	
11	PV connector	2	
12	Wrench 3#	1	
13	RJ45 Terminal	2	
14	User manual	1	
15	CT current detector	2	
16	Communication wire	4	
17	Current sensor	2	

3.4.2 Basic installation requirement

The energy storage integrated machine cabinet is IP20 and suitable for installation in dry, dust-free environments. According to EMC standards, the energy storage integrated machine cabinet is designed to meet the installation requirements in a home environment. Select the installation site according to the following requirements:

- The installation site should be well ventilated, free from rain and direct sunlight;
- The installation floor should be dry and flat. It is strictly forbidden to have water on the ground; ensure that the ground level is not shaken and can fully carry the weight of the energy storage integrated machine cabinet.
- The temperature in the installation environment should range from -10 °C to 40 °C; the relative temperature should range from 4 to 100 %.
- Reserve enough installation spacing between the front, rear, left and right, top and wall of the energy storage integrated machine cabinet to ensure good ventilation, heat dissipation, installation and maintenance, and safe escape.
- There are no combustible gas and flammable materials nearby.
- The installation environment should be clean.

3.4.3 Installation procedures

The mechanical installation steps are as follows:

Step1 user can find 3 units of battery module and 1 unit of the case of Soluna after opening the packing box .

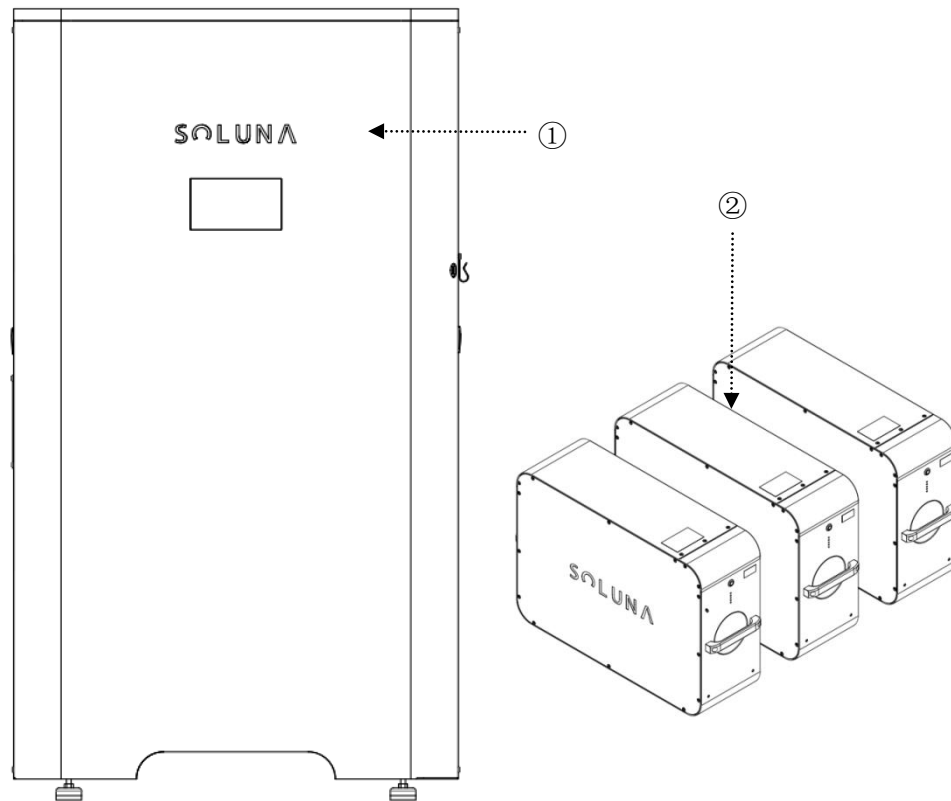


Figure 3.1 Soluna system case & Battery units

Number	Name	Remark
①	System case	
②	Battery module	

Step2 The system is installed against the wall

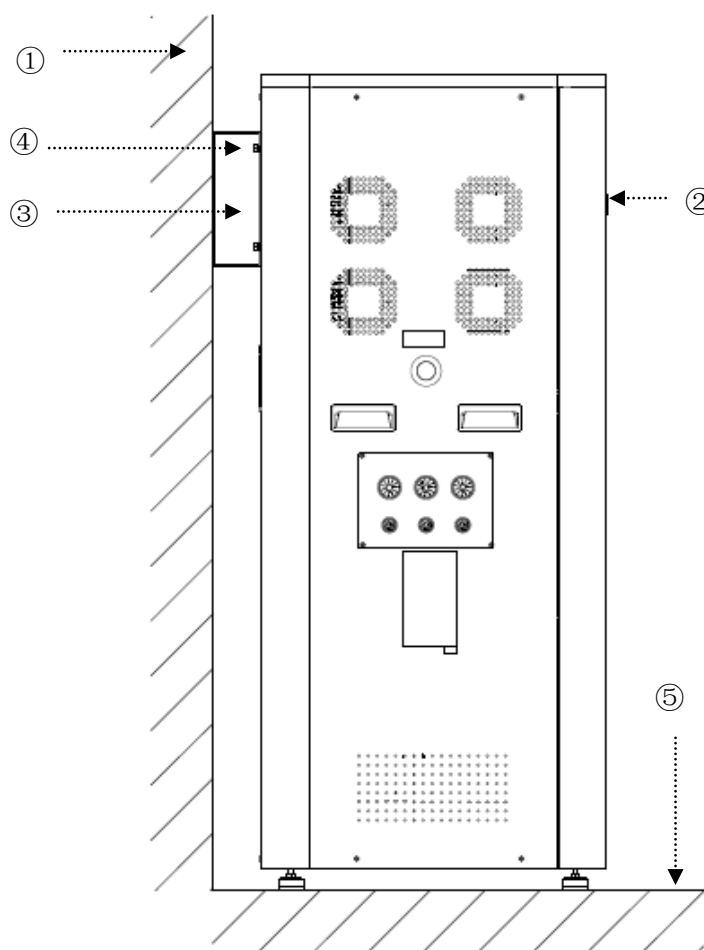


Figure 3.2 installation place

Number	Name	Remark
①	Wall	
②	Soluna System	
③	Expansion Screw	
④	Fixed Bracket	
⑤	Ground	

Step3 Open the door of Soluna system, and open the case of battery module

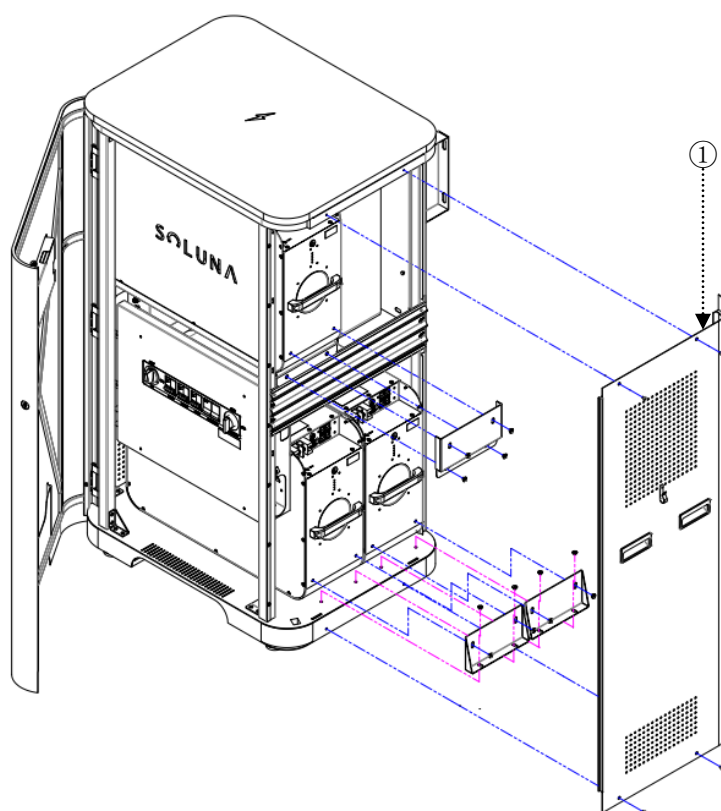


Figure 3.3 System case

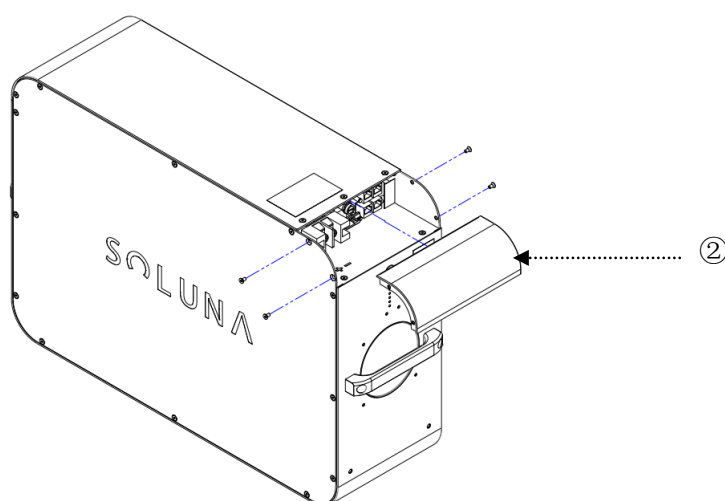


Figure 3.4 Battery unit

Number	Name	Remark
①	System case	
②	Case of Battery module	

Step4: Push the battery module into the system, and lock the battery cable and plug in the CAN communication & Remote line.

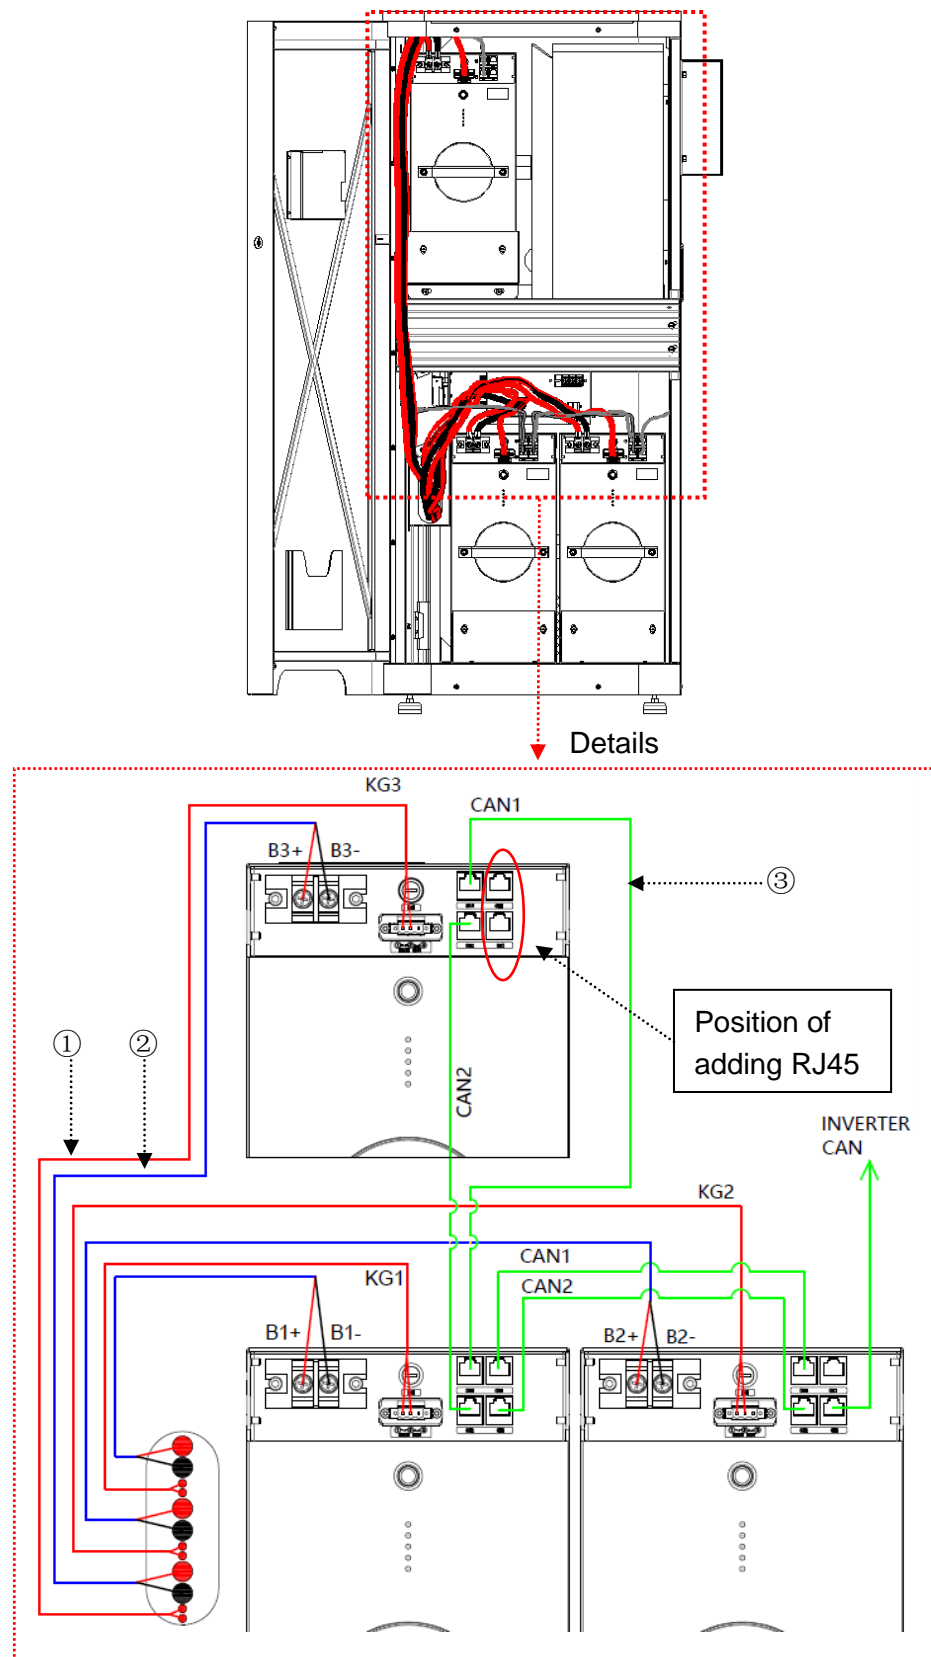


Figure 3.4 Connection for battery cable & CAN communication & Remote line
Remark: Need add RJ45 terminal on CAN1 & CAN2 BUS communication wire

In order to prevent the communication interference.
Please find the above picture for the position of adding RJ45 terminal.
User can find the RJ45 terminal in the accessories.
Please find the following picture for RJ45 terminal for details



Figure 3.5 RJ45 terminal

Number	Name	Remark
①	Remote wire	
②	Battery cable	
③	CAN communication line	

Remark: Connecting wire for communication line

- 1) All CAN1 lines are parallel for the internal communication of battery units
- 2) All CAN2 lines are parallel for the external communication (between battery unit and hybrid inverter),then,CAN2 is connected to inverter.

Step 5: Fixed battery module and Close the door of Soluna system.

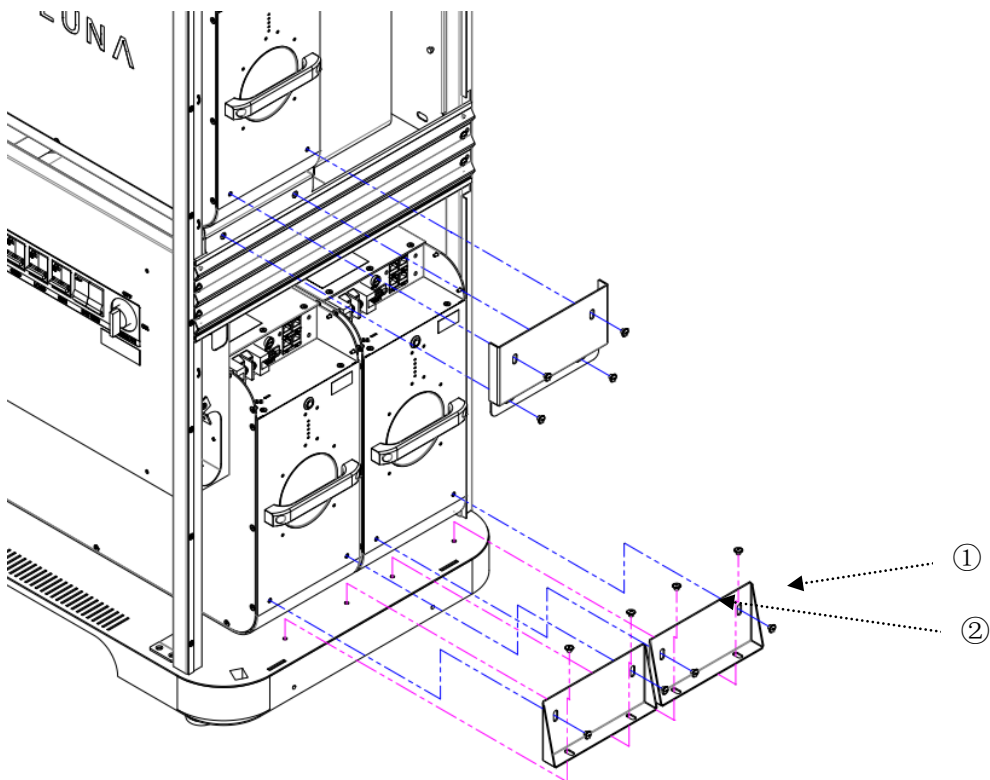


Figure 3.6 Fixed battery module

Number	Name	Remark
①	M6*12 screw	
②	Fixed bracket	

Step6 external circuit connection (GRID\LOAD/GEN/PV)

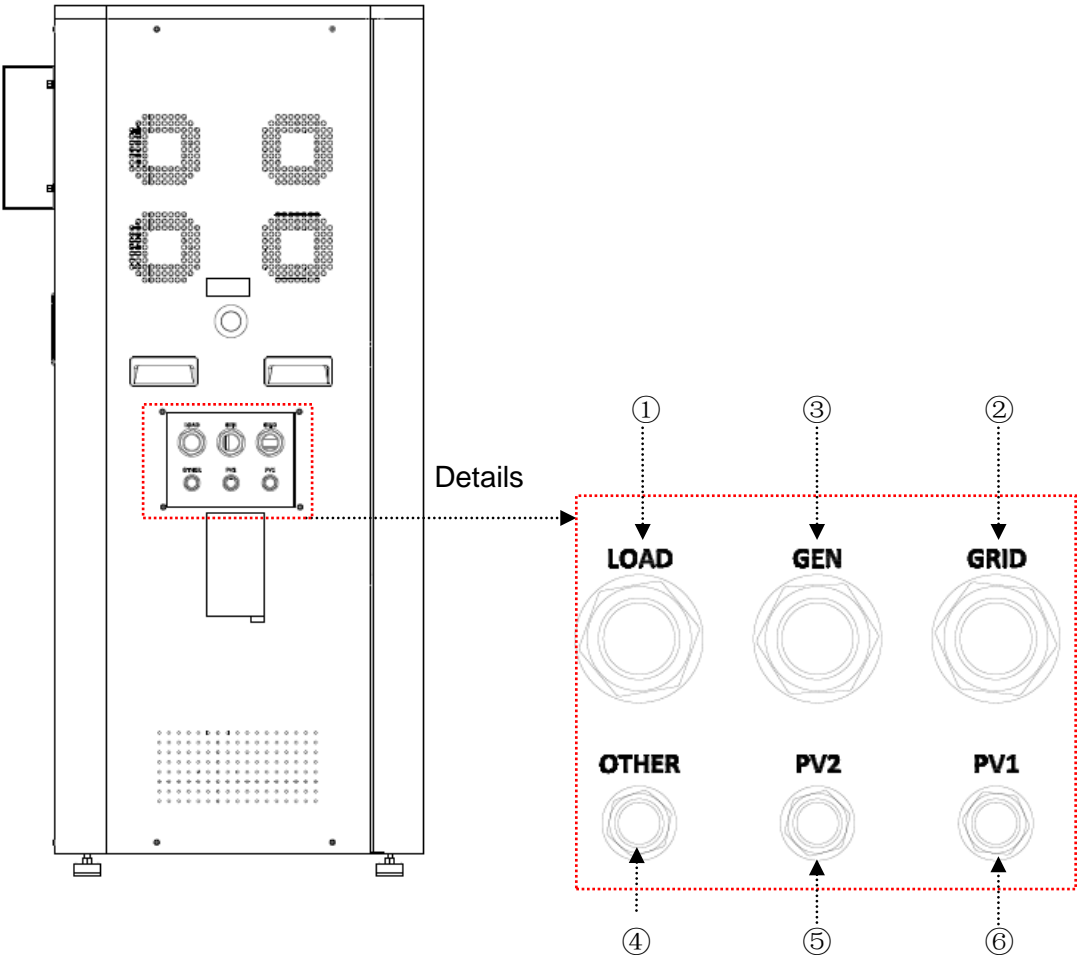


Figure3.7 external circuit port

Number	Name	Remark
①	Load entry	
②	Grid entry	
③	Gen entry	
④	Others entry	
⑤	PV1 entry	
⑥	PV2 entry	

2. External circuit connection

Open the door of Soluna, then, open the Distribution box of Soluna.

Please find the following picture for the position of distribution box of Soluna.



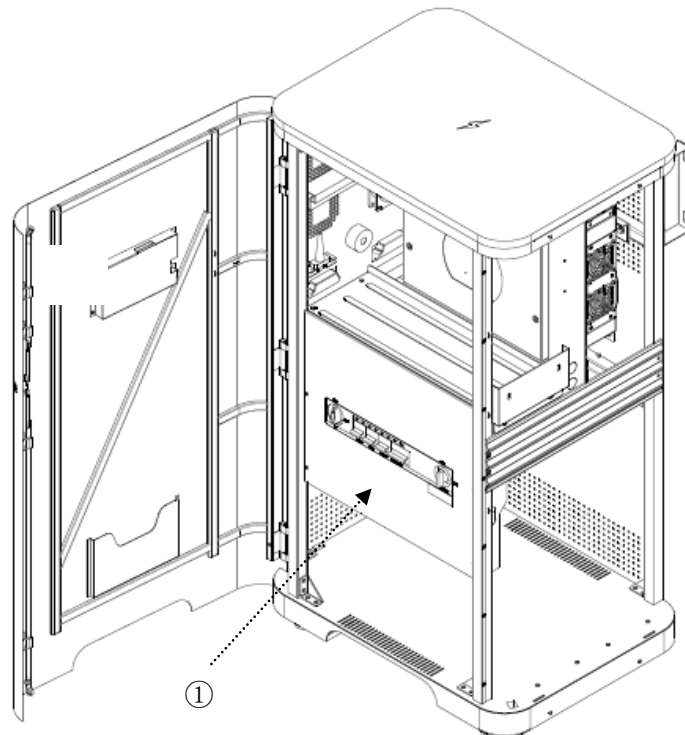


Figure 3.8 Place of distribution box of Soluna.

Number	Name	Remark
①	Distribution box	

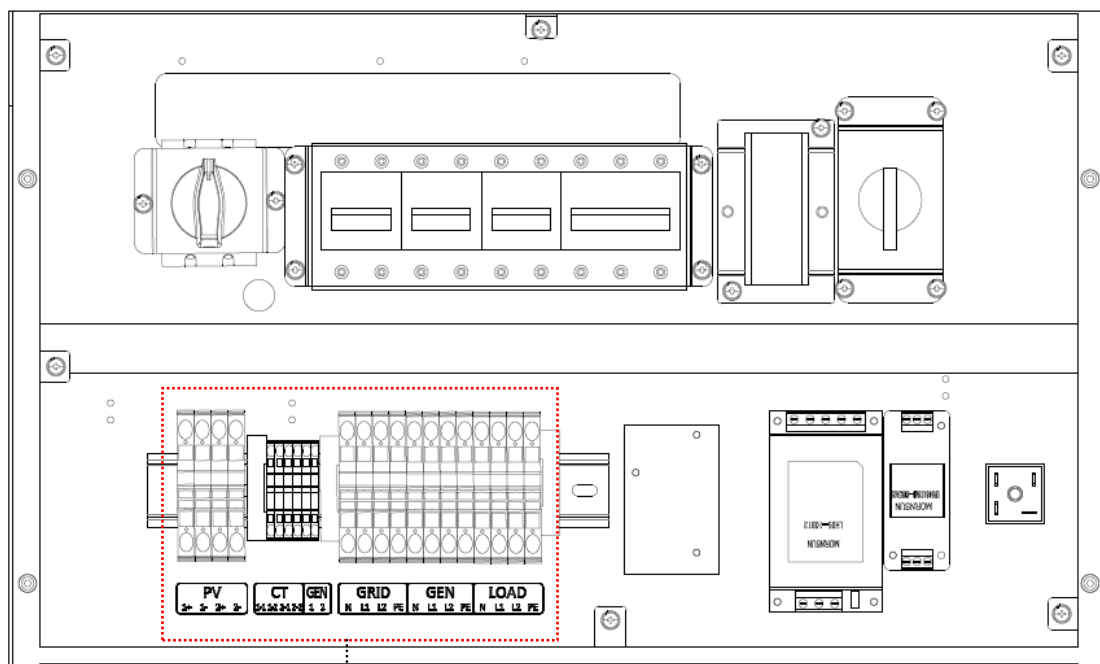

Details

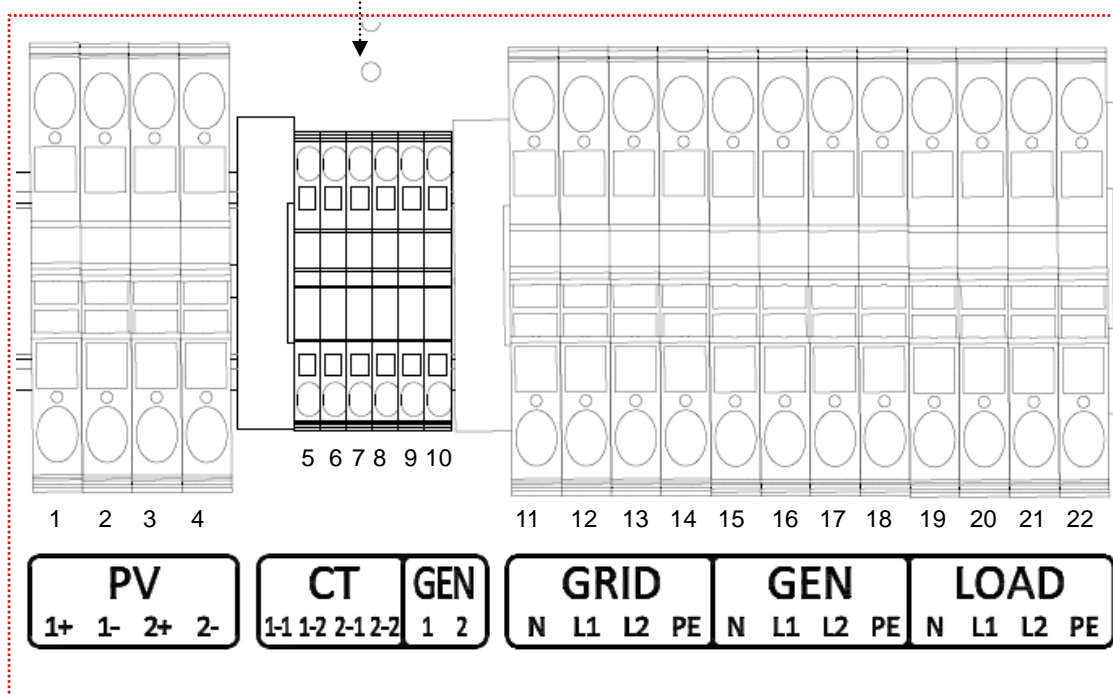

Number	Name	Remark
1	Limit1-B	control signal port of limit power 1
2	Limit1-W	control signal port of limit power 1
3	Limit2-B	control signal port of limit power 2
4	Limit2-W	control signal port of limit power 2
5	GEN-1	control signal port of GEN
6	GEN-2	control signal port of GEN
7	PV1+	
8	PV1-	

9	PV2+	
10	PV2-	
11	Grid-N	
12	Grid-L1	
13	Grid-L2	
14	PE	
15	GEN-N	
16	GEN-L1	
17	GEN-L2	
18	PE	
19	Load-N	
20	Load-L1	
21	Load-L2	
22	PE	

PV connection

	<p>Only qualified PV strings under the local electrical safety laws and regulations and comply with the technical parameters of this manual are allowed to connect to the Soluna series energy storage integrated machines. the PV string connected to the energy storage integrated machine must adopt the DC connector configured especially for the energy storage integrated machine, do not use other connection devices without authorization from our company, otherwise damage to the device, unstable operation or fire may occur, and our company will not undertake quality assurance or assume any direct or joint liability thereof.</p>
--	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Note:

It is recommended to use 10AWG of wire for PV connecting wire

PV terminal crimping-----Terminal crimping torque 3.6–4.6 N•m

- Ensure that the maximum open circuit voltage of each PV string is not higher than the maximum input voltage of the energy storage integrated machine under any circumstances.
- It is forbidden to connect the PE wire (ground wire) to the positive and negative poles of the PV strings, otherwise it will cause damage to the energy storage integrated machine.
- Ensure that the PV string polarity matches the PV connector, otherwise the energy storage integrated machine will be damaged.
- The insulation resistance of the PV panel to the ground should be greater than the safety regulation, otherwise there will be electrical hazards.
- Ensure the wires of the cable correspond to the connector terminals, and tighten the screws. The crimping torque of the screws is 1.5–2.5 N•m.

- Use a multimeter to measure the voltage of the DC input string, verify the polarity of the DC input cable, and ensure that the voltage of each string is within the allowable range of the machine

GRID & LOAD connection

	Only qualified AC transmission cables under the local electrical safety laws and regulations and comply with the technical parameters of this manual are allowed to connect to the Soluna series energy storage integrated machines
--	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Recommended wire specifications for safe system operation are as shown in the following table.

Model	GRID & Load side
Soluna S12-5K NA	It is recommended to use 10AWG of wire
Soluna S12-6K NA	It is recommended to use 8AWG of wire
Soluna S12-7.6K NA	It is recommended to use 8AWG of wire
Soluna S12-8K NA	It is recommended to use 8AWG of wire


Terminal crimping of wires L, N, and PE of the mains and load cables

Terminal crimping torque 3.6–4.6 N•m


Note:

- Before connecting the AC power grid cable to the energy storage integrated machine, the lightning protection and short circuit protection measures must be taken in accordance with the local electrical safety regulations. The PE cable (grounding cable) of the machine must be reliably grounded.
- Connect the three wires L, N, and PE of the single-phase public power grid to the corresponding AC terminals, fasten them, and tighten the screws. The crimping torque is 1.5–2.5 N•m.
- Connect the three wires L, N, and PE of the load to the corresponding load terminals, fasten them, and tighten the screws. The crimping torque is 1.5–2.5 N•m.


1) Soluna 12-5K NA

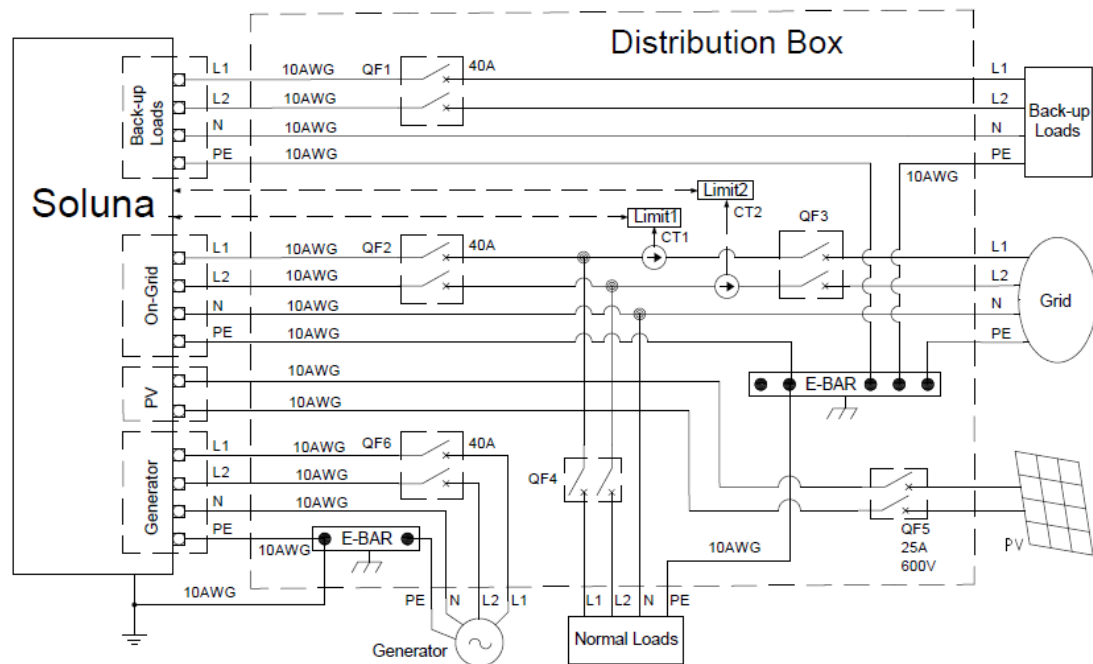


3) Soluna 12-6K NA

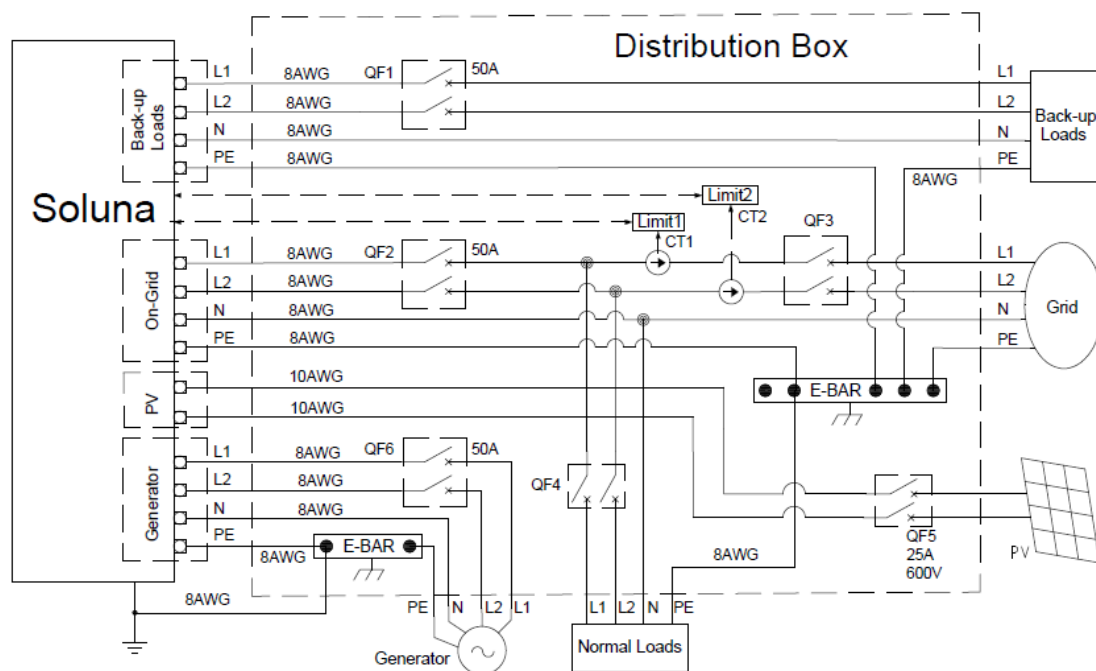

4) Soluna S12-7.6K NA & Soluna S12-8K NA

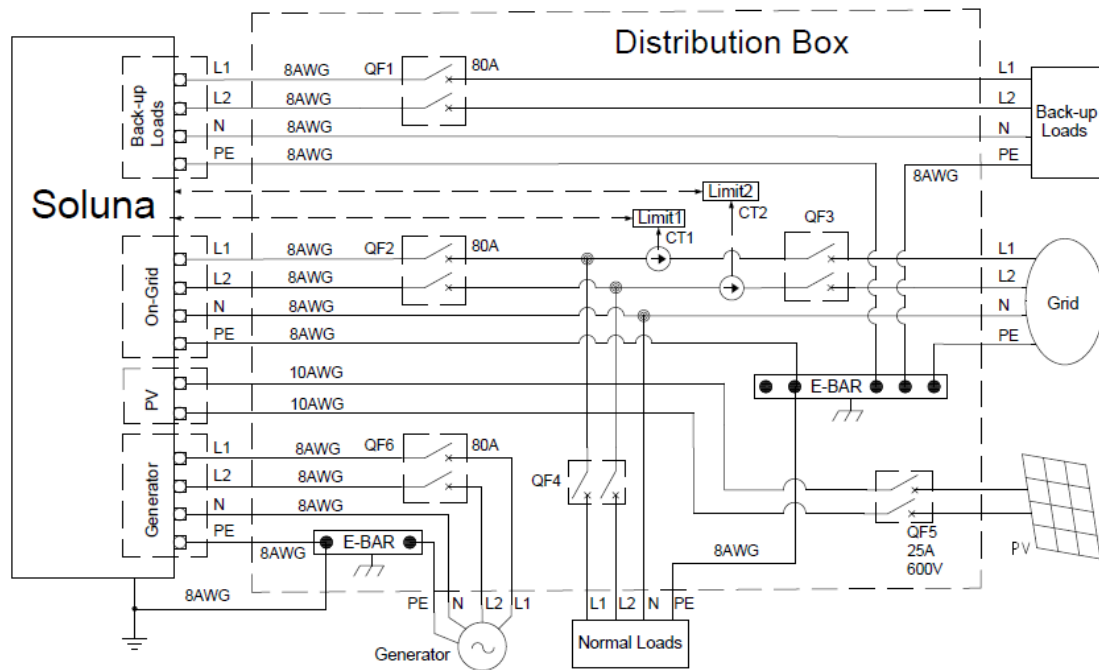

4) CT connection

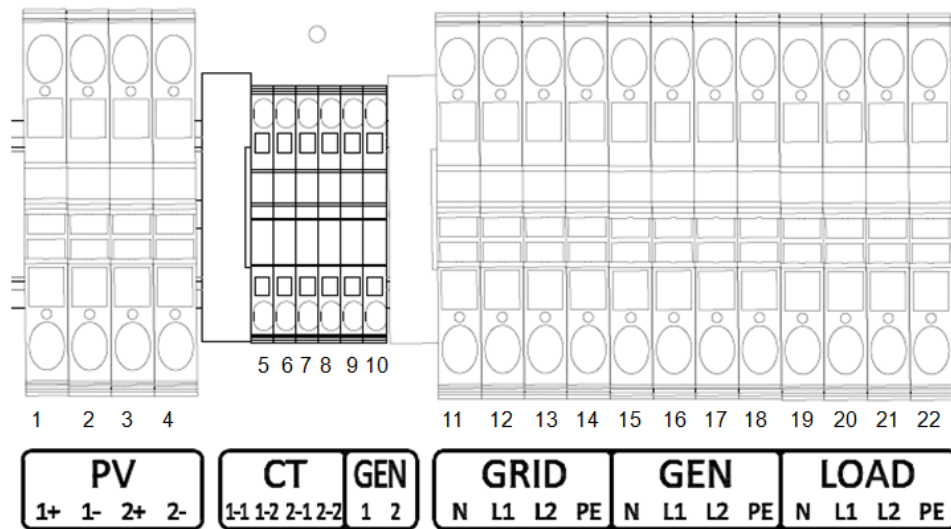

Number	Name	Remark
5	CT connector	Connect to black wire of CT1
6	CT connector	Connect to white wire of CT1
7	CT connector	Connect to black wire of CT2
8	CT connector	Connect to white wire of CT2

4 How to operate Soluna

4.1 Turn on or turn off Soluna

Turn on---Open the door, and turn on all the switch of Load/Grid/Battery/Remote

Turn off---Open the door, and turn off all the switch of Load/Grid/Battery/Remote

Please check the following picture for the position of switch

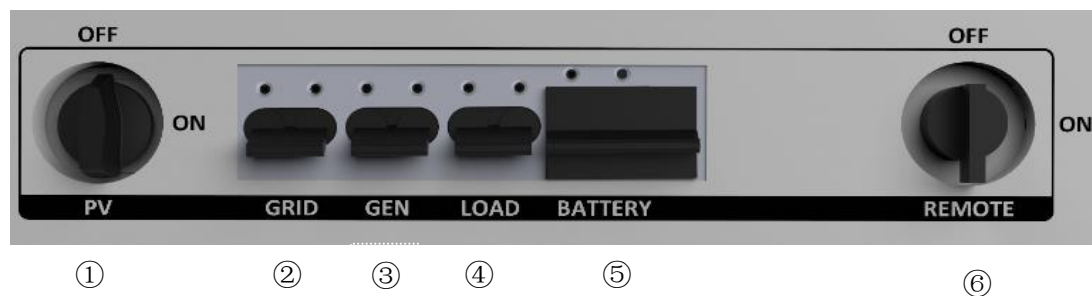


Figure4.1 Turn on\Turn off system

Number	Name	Remark
①	PV breaker	
②	Grid breaker	
③	GEN breaker	
④	Load breaker	
⑤	Battery breaker	
⑥	Remote switch	

4.2 How to operate LCD

4.2.1 Place of LCD

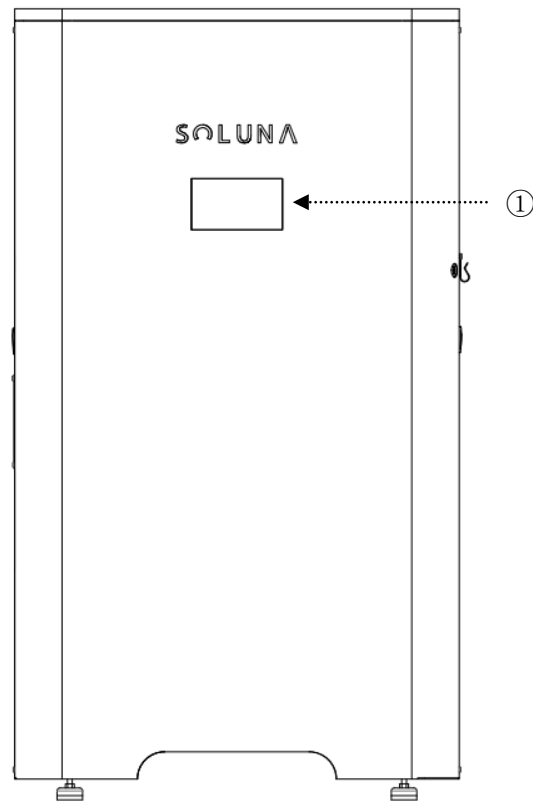


Figure 4.2 Place of LCD

Number	Name	Remark
①	LCD panel	

Note:

The LCD is touch screen, user can touch the screen to see the information of system

4.3 How to operate LCD screen (user screen)

Users can only check Soluna system operating information and perform simple charge and discharge settings on the user screen, please find the following information for details.

4.3.1 Position of LCD

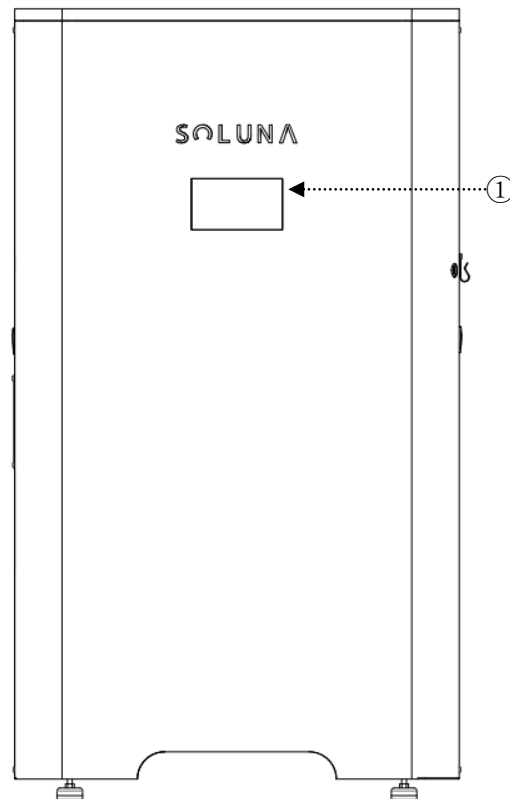


Figure 4.2 LCD

Number	Name	Remark
①	LCD panel	

Note:

The LCD is touch screen, user can touch the screen to see the information of system.

4.3.2 How to check the information of LCD screen

LCD screen including 5 icons.

(Status、Settings、Data、Production information、Battery Capacity)

Click each icon will see the relevant information.

Please find the following picture for the interface of LCD screen.

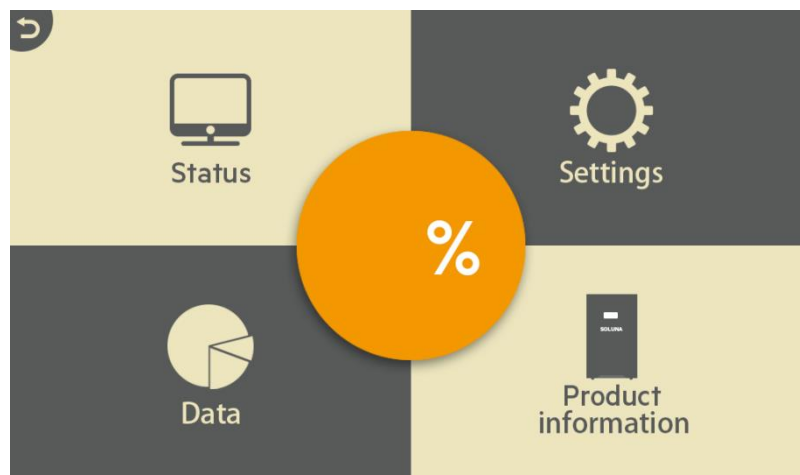


Figure 4.3 LCD Screen

4.3.3 How to check the information of “Status” icon

User can find the following interface after clicking the icon of Status



Figure 4.4 information of status icon

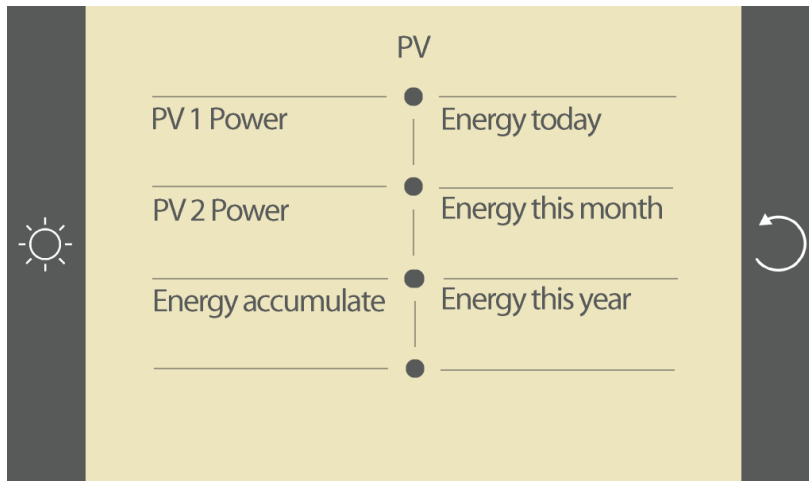


Figure 4.5 PV information

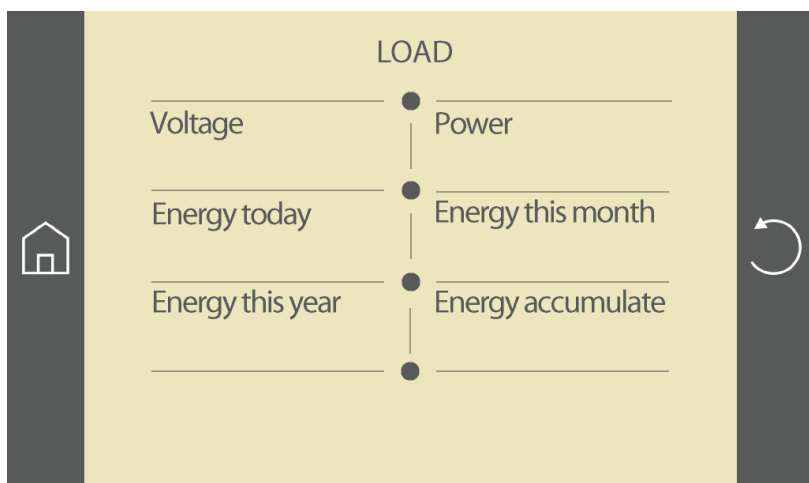


Figure 4.6 Load information

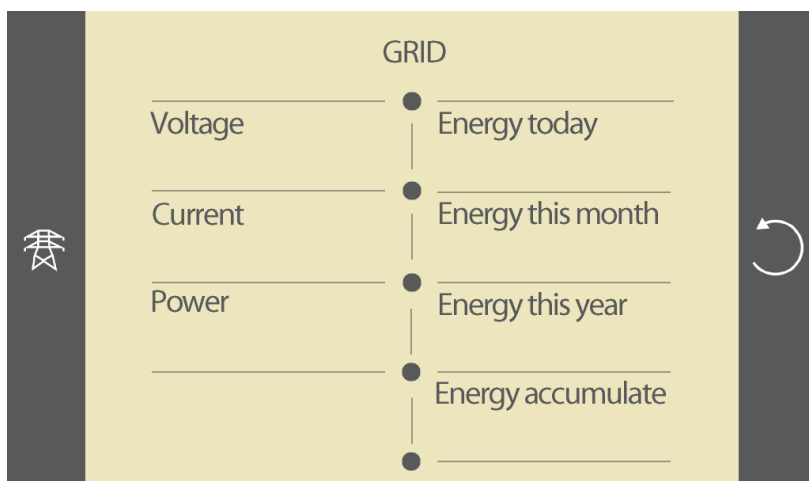


Figure 4.7 Grid information

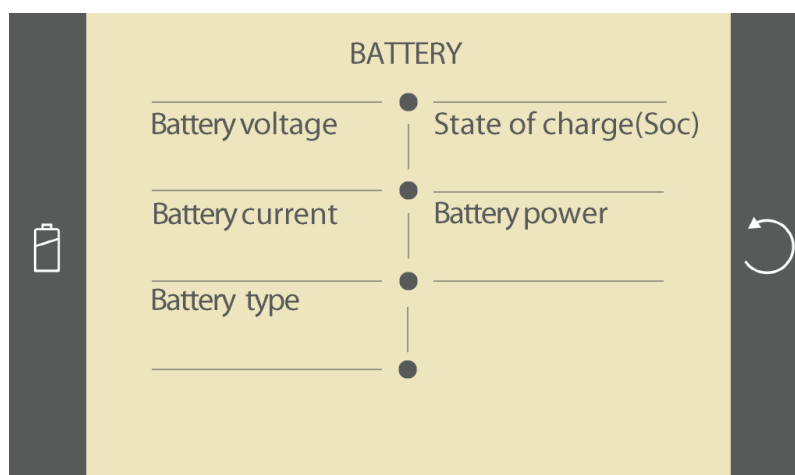


Figure 4.8 Battery information

4.3.4 How to Setting parameters of Soluna system

User find the following interface after clicking the icon of “Setting” .

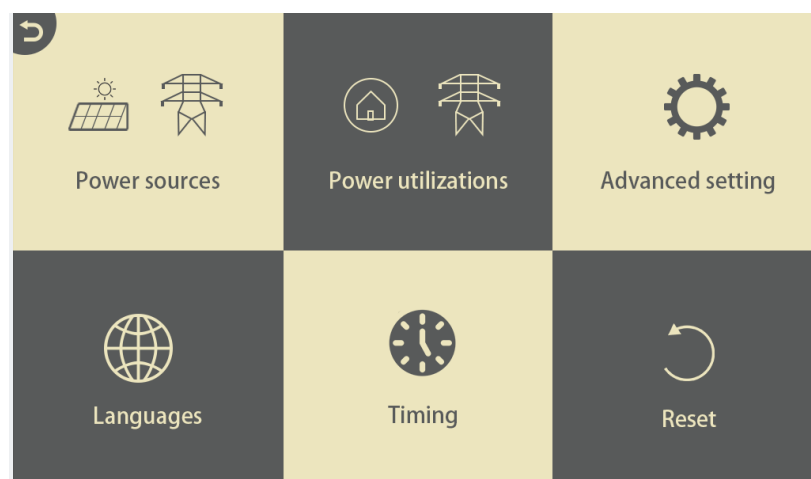


Figure 4.9 Setting icon information

User can find the following interface after clicking the icon of Power sources.

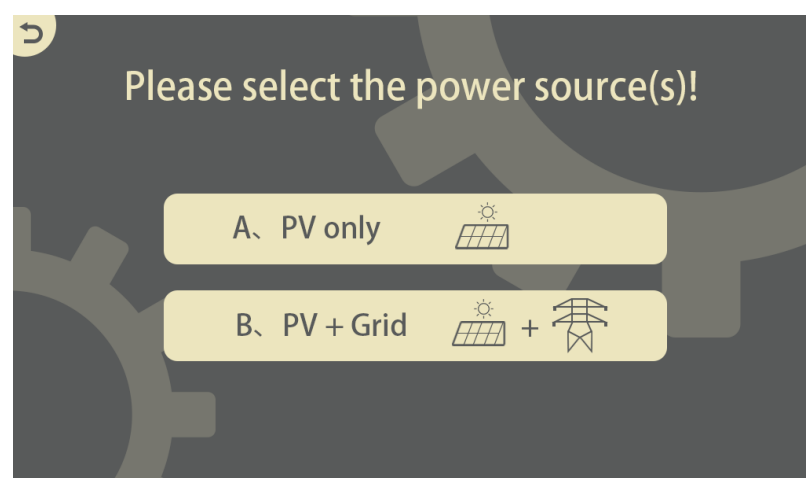


Figure 4.10 Power source

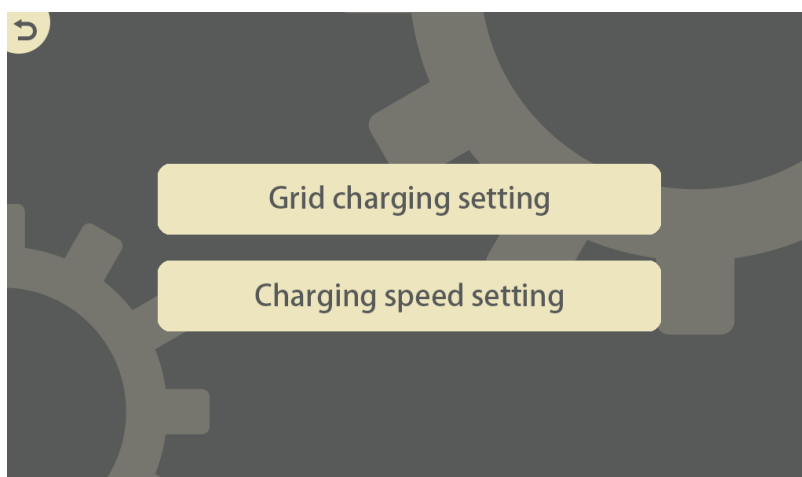


Figure 4.11 Charging setting (1)

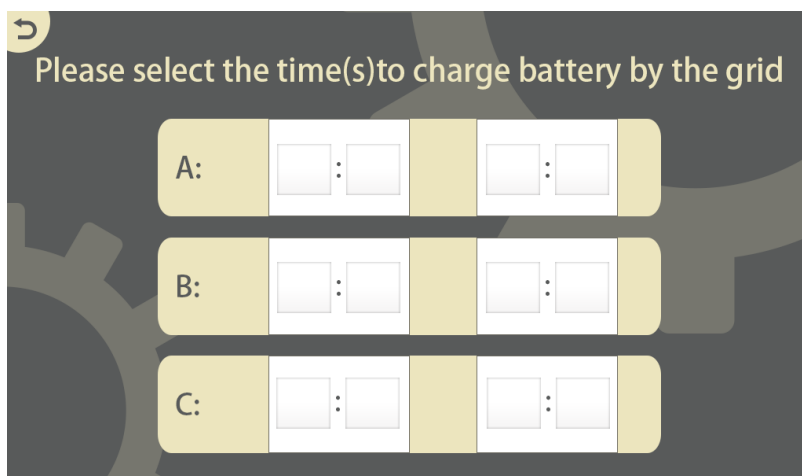


Figure 4.12 Charging setting (2)


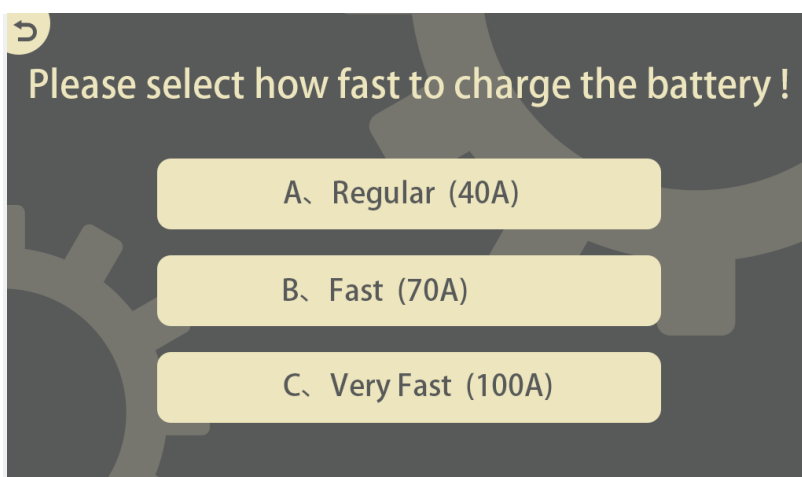


Figure 4.13 Charging setting (3)


The initial default charging speed is Regular (40A), Unless there are special circumstances. it is not recommended to use Very Fast to charge the battery. Low current charging is beneficial to prolong the battery life.

User can find the following interface after clicking the icon of power utilizations.

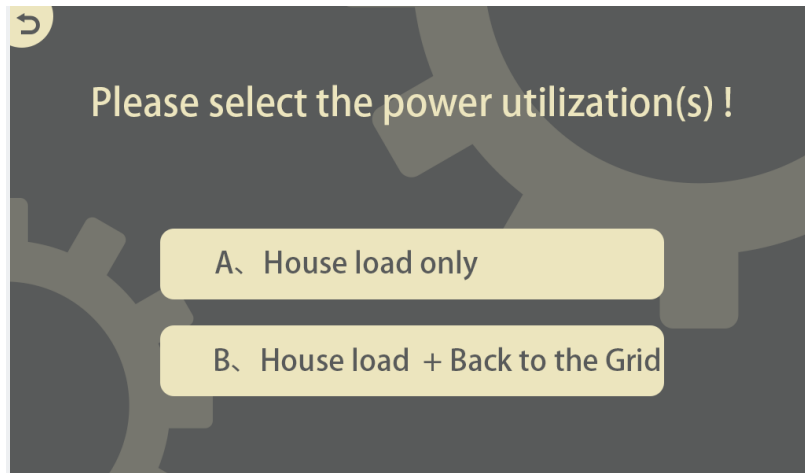


A screenshot of a user interface with a dark background and a gear pattern. At the top left is a yellow circular icon with a white arrow. The title 'Please select the power utilization(s) !' is in yellow text. Below it are two yellow buttons with black text: 'A、 House load only' and 'B、 House load + Back to the Grid'.

If user does not want the battery's energy to be fed back to the grid, tick "House load only".

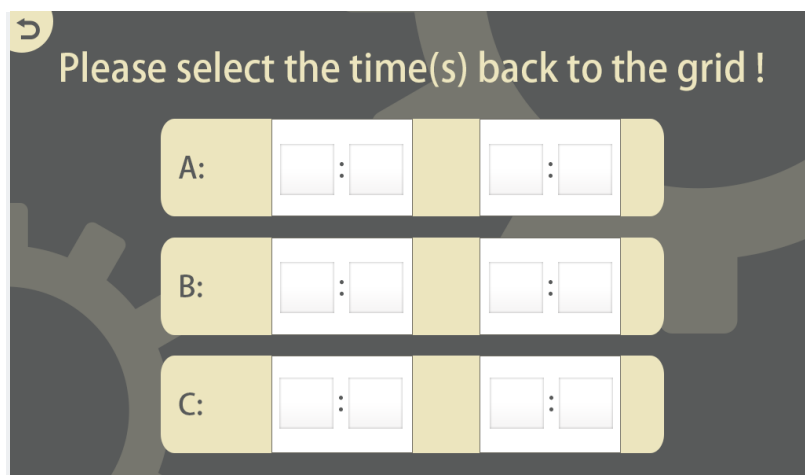

A screenshot of a user interface with a dark background and a gear pattern. At the top left is a yellow circular icon with a white arrow. The title 'Please select the time(s) back to the grid !' is in yellow text. Below it are three rows of time selection controls, labeled A, B, and C. Each row consists of a yellow button with a label (A:, B:, or C:), followed by two white boxes for hours and minutes separated by a colon, and then a yellow button.


Users can set the battery discharge time period according to their need. User can find the following interface after clicking the icon of Languages.

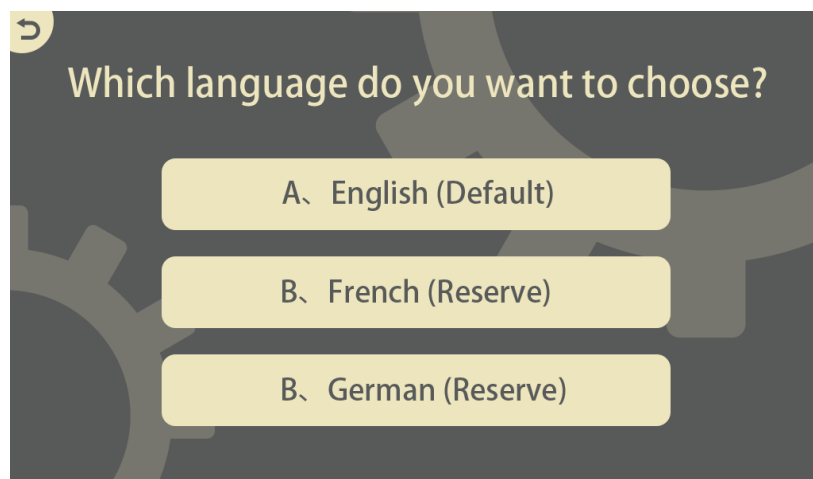

A screenshot of a user interface with a dark background and a gear pattern. At the top left is a yellow circular icon with a white arrow. The title 'Which language do you want to choose?' is in yellow text. Below it are three yellow buttons with black text: 'A、 English (Default)', 'B、 French (Reserve)', and 'B、 German (Reserve)'.

Remark: There are 3 kinds of language option in the Soluna system.
But ,So far, only English is default, French and German are reserve.

User can find the following interface after clicking the icon of timing.

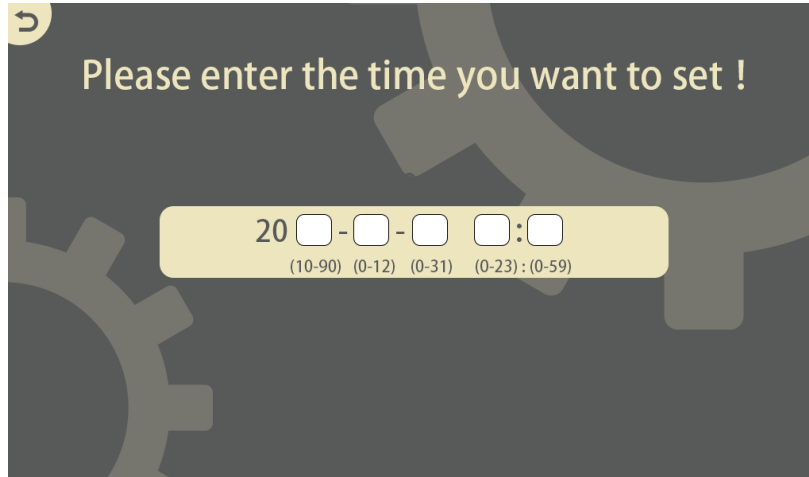


The initial defaults time is China time, the user must change it to local time after finishing installing the system because the charging and discharging time setting on the user's screen is directly related to the local time.


User can find the following interface after clicking the icon of Reset & advanced Setting. User need to enter password if the user wants to restore the parameters of Soluna system.

(Remark: Soluna will provide the password if user needs it,

The advanced settings are only opened to installers, and it is not recommended that end users enter into the advanced settings to set the parameters.

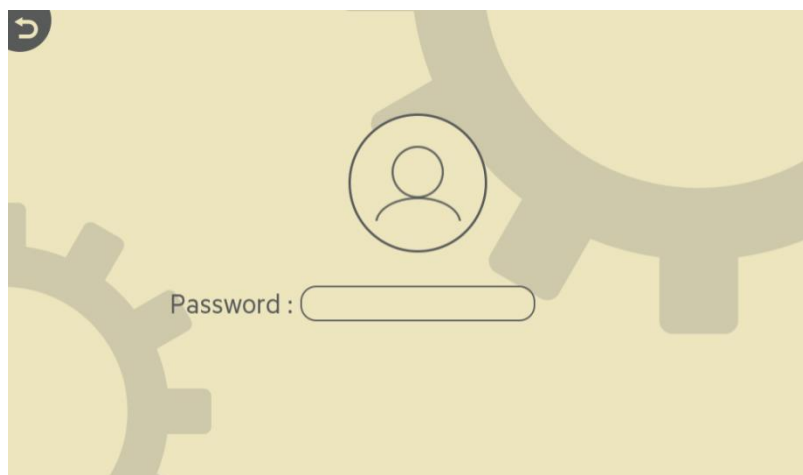


User needs to confirm again it after setting the parameters of Soluna system.

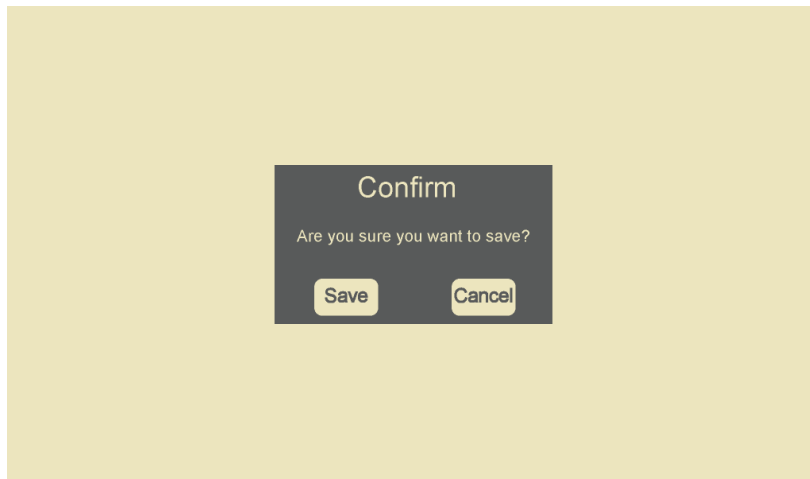


4.3.5 How to check the information of “Data” icon.


User can find the following interface after clicking the icon of Data.

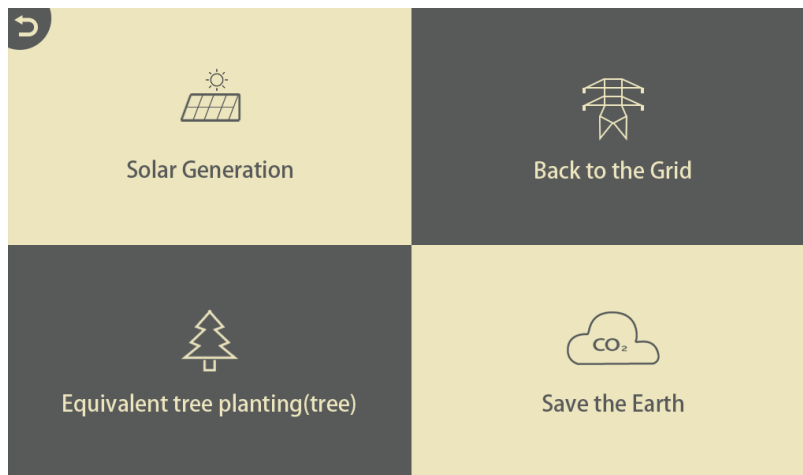

a. User can find the following interface after clicking the icon of Solar generation.

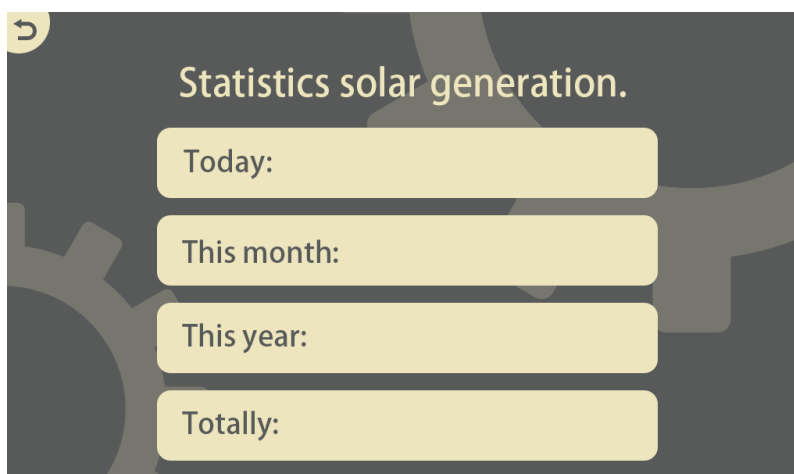


b. User can find the following interface after clicking the icon of “back to grid”.

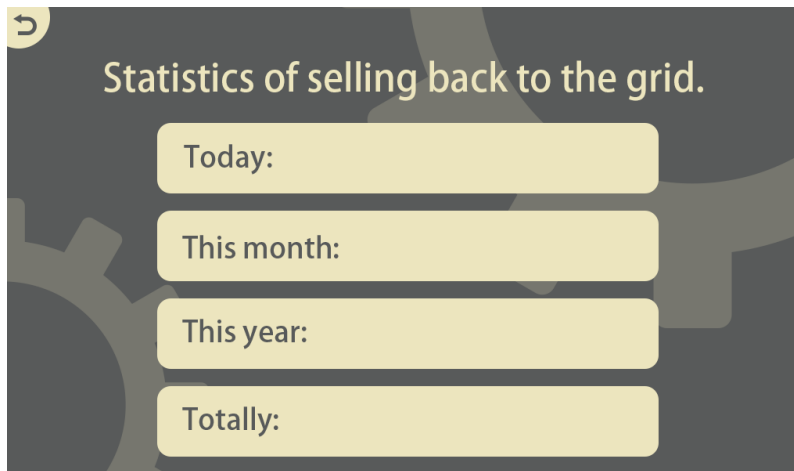


A screenshot of a user interface titled "Statistics of selling back to the grid." in a light green font. The background is dark grey with faint gear patterns. In the top-left corner, there is a yellow circular icon with a white curved arrow pointing right. Below the title, there are four horizontal yellow input fields stacked vertically. Each field has a label to its left: "Today:", "This month:", "This year:", and "Totally:".

C. User can find the following interface after clicking the icon of “Equivalent tree Planting”.

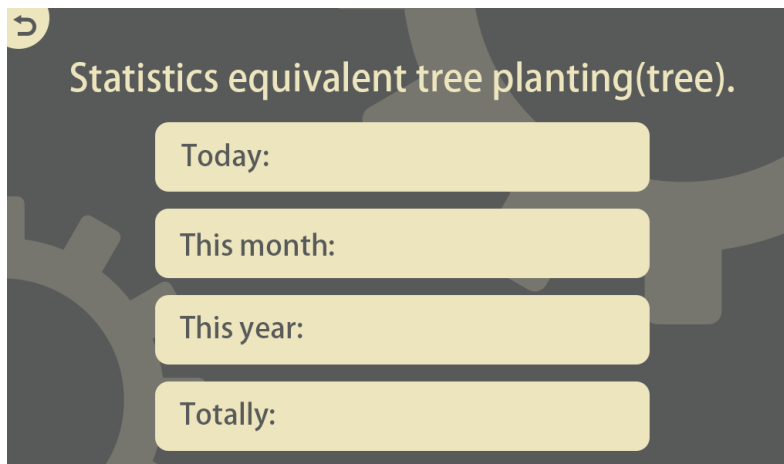

A screenshot of a user interface titled "Statistics equivalent tree planting(tree)." in a light green font. The background is dark grey with faint gear patterns. In the top-left corner, there is a yellow circular icon with a white curved arrow pointing right. Below the title, there are four horizontal yellow input fields stacked vertically. Each field has a label to its left: "Today:", "This month:", "This year:", and "Totally:".


d. User can find the following interface after clicking the icon of “save the earth”.

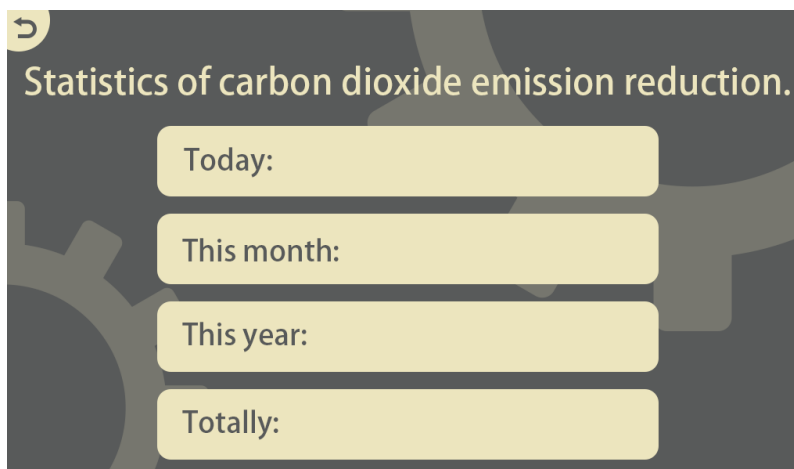

A screenshot of a user interface titled "Statistics of carbon dioxide emission reduction." in a light green font. The background is dark grey with faint gear patterns. In the top-left corner, there is a yellow circular icon with a white curved arrow pointing right. Below the title, there are four horizontal yellow input fields stacked vertically. Each field has a label to its left: "Today:", "This month:", "This year:", and "Totally:".

4.3.6 How to check the production information of Soluna system


User can find the fault information after click the icon of “production information”.

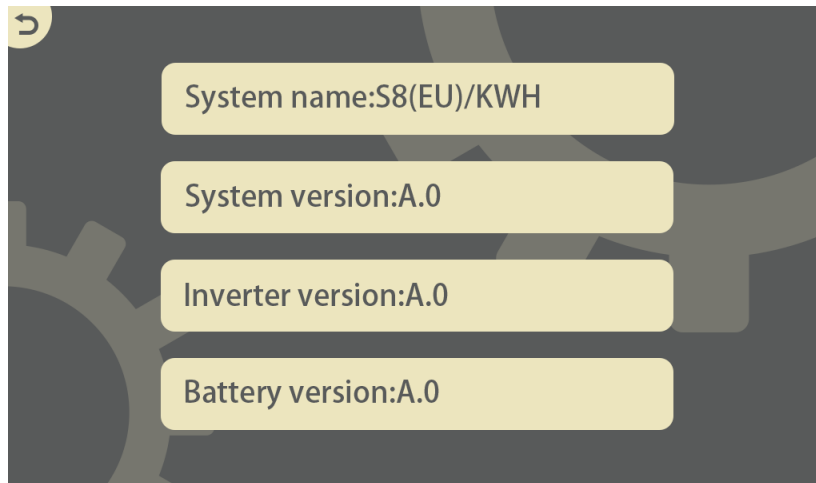

4.3.7 How to Check the fault information

User can find the fault information after click the fault icon

Remark: User will find an icon blinking in the upper right corner of the LCD panel if there is any fault during Soluna system operation.

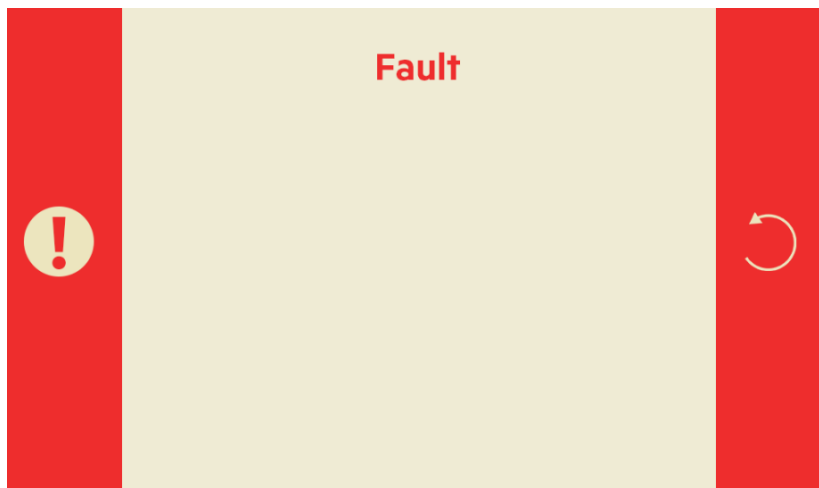

5.How to operate the LCD （only for installer）

The advanced setting is only opened to installers, and installers can set them according to user's requirements.

5.1 battery parameter setting

The screenshot shows the LCD menu for Battery parameter setting. The menu is divided into three sections: Battery (B), Grid (G), and Others (O). The Battery section is currently selected. The settings are as follows:

Section	Parameter	Value	Range
Battery (B)	Battery capacity	<input type="text"/>	[0-300Ah]
Grid (G)	Max Current charge	<input type="text"/>	[0-150A]
	Max Current discharge	<input type="text"/>	[0-150A]
Others (O)	Use Batt V charged	<input type="checkbox"/>	
	Use Batt % charged	<input type="checkbox"/>	
	Smart Lithium	<input type="checkbox"/>	

The installer can set the Max charging and discharging current values according to actual needs. Meanwhile, “Use Battery V charged” & “Smart Lithium” should be ticked.

The screenshot shows the LCD menu for DisCharge parameter setting. The menu is divided into three sections: Battery (B), Grid (G), and Others (O). The Battery section is currently selected. The settings are as follows:

Section	Parameter	Value	Range
Battery (B)	ShutDown	<input type="text"/>	[44-57V]
Grid (G)	Low Battery	<input type="text"/>	[44-57V]
	Restart	<input type="text"/>	[44-57V]

- 1) Shut down----- Soluna system will shutdown if the battery voltage below this value.
- 2) Low Battery-----Soluna system will alarm if the battery voltage below this value .
- 3) Restart-----Restart level after Soluna System shutdown.

Gen charge” start V”----- Gen will start when the battery voltage is less than the “start V” in the condition of off-grid mode

GEN charge “current” ----- Current value that GEN charges the battery after started

Grid charge “start V” ----- Grid will start when the battery voltage is less than the “start V” in the condition of off-grid mode

Grid charge “current” ----- Current value that Grid charges the battery after started.

5.2 Grid parameters setting

Select the correct Grid frequency accordingly, Otherwise Soluna system will not Work.

B
Battery

G
Grid

O
Others

Limiter

☐ Grid Sell

Time

Power(W)

Battery

Enable

☐ No Limited

:

:

:

:

:

:

☐ Limited Power to Load

:

:

:

:

:

:

☐ Limited Power to Home

:

:

:

:

:

:

☐ Time Of Use Selling

:

:

:

:

:

:

^

↺

💾

v

Charging and discharging time of Soluna system.

Six periods can be set, from 0:00-24:00.

Under “House load Only”, Do not tick” Grid Sell”

Under ”House load+Back to Grid”, Tick ”Grid Sell”.

Grid sell----The energy generated by PV supply house loads and battery in priority, excess energy would feed back to Grid.

Limited Power to load-----Tick it means output power depends on actual loads

Limited power to home-----Tick it means output power depends on CT position.

5.3 Others

Installer can find the Version information of Inverter hardware & Software.


The screenshot shows a mobile application interface with a sidebar on the left containing three menu items: 'B Battery', 'G Grid', and 'O Others'. The 'O Others' item is selected. The main content area is titled 'Others' and contains three input fields: 'Inverter serial number', 'Inverter MCU 1', and 'Inverter MCU 2'. On the right side of the screen, there is a vertical toolbar with four icons: an upward arrow, a circular arrow, a floppy disk icon, and a downward arrow.

The screenshot shows the same mobile application interface. The 'O Others' menu item is selected. The main content area is titled 'Others' and contains three settings: 'Solar Arc Fault On' with a checkbox, 'Clear Arc Fault' with a checkbox, and 'Date' with a date picker showing '20' followed by four input boxes for month, day, and hour, and a colon followed by an input box for minutes. Below the date picker, there are ranges for each input box: '[10-90]' for the year, '[0-12]' for the month, '[0-31]' for the day, '[0-23]' for the hour, and '[0-59]' for the minutes. The right sidebar with navigation icons is also visible.


Solar Arc Fault on----- this is only for US market

6.Caution


- 1) The Soluna system does not support parallel (three-and single-phase) operation on the AC-Backup, Parallel operation of the unit will void the warranty.

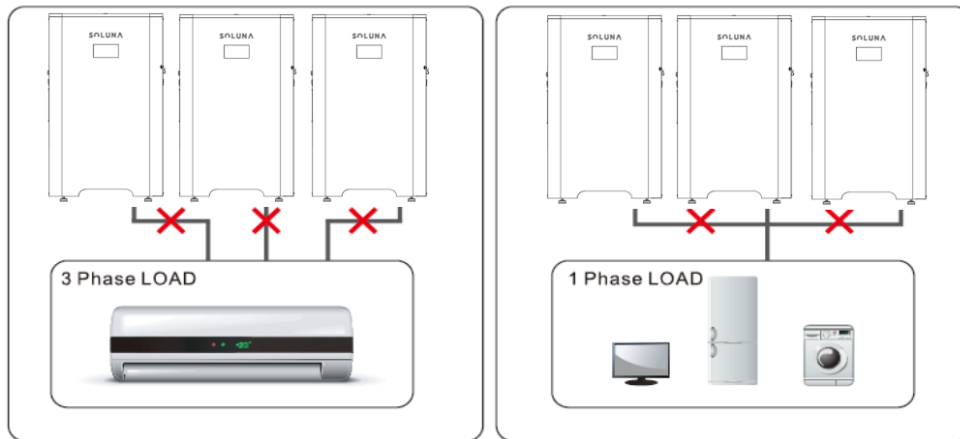

- 2) Single PV string Can't be connected to 2 or more Soluna systems.

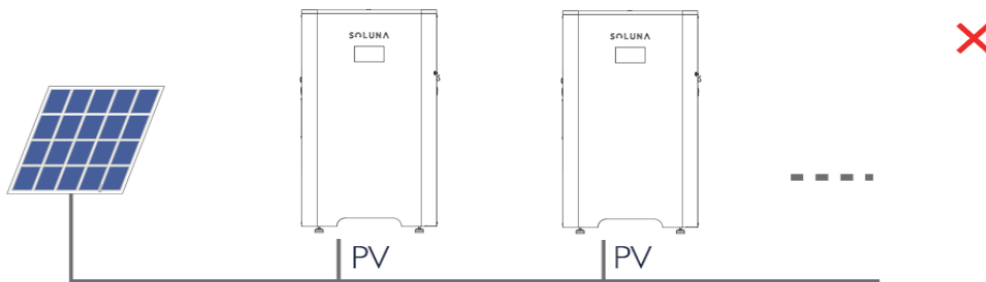

- 3) Back-up side can't be connected to Grid.

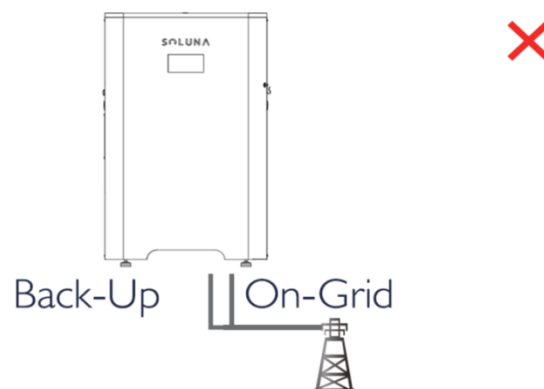

- 4) Soluna system must be grounded. Otherwise, there might be possible to hazard personal safety, besides, it is probably to affect LCD's display.
- 5) Water pump is not recommended to connect with Soluna S12NA.

7 Troubleshoot

7.1 Below are the descriptions of fault codes when system works abnormally. Find the table-1 for details.

If any of the fault messages listed in Table-1 appear on Soluna screen and the fault has not been removed after restarting, Please contact installer or Soluna.

Table-1		
Fault code	Fault information	Remark
F01	Dc input polarity reverse fault	
F02	Dc insulation impedance permanent fault	
F03	Dc leakage current fault	
F04	Ground fault GFID (battery end grounding)	
F05	Read the memory error	
F06	Write the memory error	
F07	GFDI Blown Fuse	
F08	GFDI Grounding contact failure	
F09	IGBT damage by excessive drop voltage	
F10	Auxiliary switch power supply failure	
F11	Ac main contactor errors	
F12	Ac auxiliary contactor errors	
F13	Grid voltage surge	
F14	DC firmware over current malfunction	
F15	AC firmware over current malfunction	
F16	GFCI(RCD) Ac leakage current fault	
F17	Three phase current, over-current fault	
F18	AC over current fault of hardware	
F19	All hardware failure synthesis	
F20	DC over current fault of the hardware	
F21	Dc leakage flow fault	
F22	Crash stop (if there is a stop button)	
F23	Ac leakage current is transient over current	
F24	Dc insulation impedance failure	
F25	Dc reverse irrigation failure	
F26	The dc bus is unbalanced	
F27	Dc end insulation error	
F28	Inverter 1 dc high fault	
F29	Ac load switch failure	
F30	Ac main contactor failure	

F31	Ac secondary contactor failure	
F32	Inverter 2 dc high fault	
F33	AC Current over current	
F34	AC Overload	
F35	AC Grid Unavailable fault	
F36	AC grid phase error	
F37	Ac three-phase voltage imbalance failure	
F38	Ac three phase current unbalanced failure	
F39	AC Over current failure	
F40	DC Over current failure	
F41	AC Line W,U over voltage	
F42	AC Line W,U low voltage	
F43	AC Line W,V over voltage	
F44	AC Line W,V low voltage	
F45	AC Line U,V over voltage	
F46	AC Line U,V low voltage	
F47	AC Over frequency	
F48	AC Low frequency	
F49	Phase U grid current dc current high	
F50	Phase V grid current dc current high	
F51	Phase W grid current dc current high	
F52	AC inductor A, Phase current dc current high	
F53	AC inductor B, Phase current dc current high	
F54	AC inductor C, Phase current dc current high	
F55	dc bus voltage is too high	
F56	dc bus voltage is too Low	
F57	AC reverse irrigation	
F58	AC grid U over current	
F59	AC grid V over current	
F60	AC grid W over current	
F61	Reactor A phase current high	
F62	Reactor B phase current high	
F63	Reactor C phase current high	
F64	IGBT Heat sink High temperature	

7.2 The followings are common methods of troubleshooting.

If problem haven't been solved, Please contact Soluna.

Table-2		
Error code	Description	Solutions
F13	Working mode change	Inverter work mode changed 1) wait for a minute and check. 2) Seek help from us, if can't go back to normal state.
F18	AC over current fault of hardware	AC side over current fault 1) Please check whether the backup load power and common load power are within the range; 2) Restart and check whether it is in normal; 3) Seek help from us, if cannot go back to normal state.
F20	DC over current fault of the hardware	DC side over current fault 1) Check PV module connect and battery connect; 2) Turn off the DC switch and AC switch and then wait one minute, then turn on the DC/AC switch again; 3) Seek help from us, if cannot go back to normal state.
F23	AC leakage current is transient over current	Leakage current fault 1) Check the cable of PV module and inverter; 2) Restart inverter; 3) Seek help from us, if cannot go back to normal state.
F24	DC insulation impedance failure	PV isolation resistance is too low. 1) Check the connection of PV panels and inverter is firmly and correctly; Check whether the PE cable of inverter is connected to ground; 2) Seek help from us, if cannot go back to normal state.
F26	The DC busbar is unbalanced	1) Please wait for a while and check whether it is normal; 2) If still same, and turn off the DC switch and AC switch and wait for one minute and then turn on the DC/AC switch; 3) Seek help from us, if cannot go back to normal state.
F35	No AC grid	No Utility 1) Please confirm grid is lost or not; Check the grid connection is good or not;

		2) Check the switch between inverter and grid is on or not; 3) Seek help from us, if cannot go back to normal state.
F42	AC line low voltage	Grid voltage fault 1) Check the AC voltage is in the range of standard voltage in specification; 2) Check whether grid AC cables are firmly and correctly connected; 3) Seek help from us, if cannot go back to normal state.
F47	AC over frequency	Grid frequency out of range 1) Check the frequency is in the range of specification or not; 2) Check whether AC cables are firmly and correctly connected; 3) Seek help from us, if cannot go back to normal state.
F48	AC lower frequency	Grid frequency out of range 1) Check the frequency is in the range of specification or not; 2) Check whether AC cables are firmly and correctly connected; 3) Seek help from us, if cannot go back to normal state.
F56	DC busbar voltage is too low	Battery voltage low 1) Check whether battery voltage is too low; 2) If the battery voltage is too low, using PV or grid to charge the battery; 3) Seek help from us, if cannot go back to normal state.
F63	ARC fault	1) ARC fault detection is only for US market; 2) Check PV module cable connection and clear the fault; 3) Seek help from us, if cannot go back to normal state.
F64	Heat sink high temperature failure	Heat sink temperature is too high 1) Check whether the work environment temperature is too high; 2) Turn off the inverter for 10mins and restart; 3) Seek help from us, if cannot go back to normal state

8.How to use the generator & AC couple function

Soluna system have the function of diesel generator & AC couple.

If the user who want use the diesel generator & AC function, please contact to us, following the engineers' instruction to operate.

9.Contact us

If any questions for Soluna system, please contact us.

SOLUNA

Add: No.3492 Jinqian Road, Shanghai, China 201406

Tel: +86-21-57475835

Email: sales@solunabattery.com

Web: www.solunabattery.com